

# **CHP** - Compact High Performance Kopfstellen

# **HKM 40-02H** HDMI | DVB-C/T/IPTV **Encoder/Modulator**

# Betriebsanleitung







# Inhaltsverzeichnis

1.	Produk	tbeschreibung	.4
1.1	I. A	llgemeines	. 4
1.2	2. Li	eferumfang	.4
1.3	3. Ei	ngang	.4
1.4	1. A	usgang	. 5
	1.4.1.	DVB-C / DVB-T	. 5
	1.4.2.	IPTV	. 5
1.5	5. G	rafische Benutzeroberfläche	. 5
1.6	5. A	nzeigeelemente und Anschlüsse	. 6
2.	Monta	ge und Anschluss	. 7
2.1	I. W	/andmontage	.7
2.2	2. N	Iontage im 19"-Rack	. 8
2.3	B. P.	ptentialausgleich	. 8
24	1 H	DMI-Anschluss	8
2 "	5 Н	F-Ausgang	9
2.6	5 IP	TV-Anschluss	9
2 7	7 Si	nanningsversorging	9
יב. ר	Van fin		10
<u>ح</u>	Kontigi		10
3.	I. A		11
3.4	<u>и.</u> н	F-Einstellungen (KF)	12
	3.2.1.	Parameter fur DVB-C oder DVC-1	12
	3.2.2.	Erweiterte HF-Einstellungen	14
3.3	3. IP	TV-Einstellungen	15
	3.3.1.	Setup Stream IP	15
	3.3.2.	Setup Stream Port	15
	3.3.3.	IP Stream Status	16
3.4	4. V	ideo	16
3.5	5. A	udio	17
3.6	5. A	usgangs-Streams	18
	3.6.1.	Service	18
	3.6.2.	LCN	19
	3.6.3.	PID	19
	3.6.4.	NIT	20
	3.6.5.	PDS	20
	3.6.6.	Transportstream ID	21
3.7	7. Sy	ystem	21
	3.7.1.	Reset	21
	3.7.2.	Systemdaten	22
	3.7.3.	Software-Upgrade	22
	3.7.4.	IP-Adresse	23
	3.7.5.	Sprache	23
	3.7.6.	Passwort	24
	3.7.7.	SMARTPortal	25
4.	Technis	sche Daten	26

## **WARNUNG**

- → Beachten Sie die dem Gerät beiliegenden Sicherheitshinweise! Diese sind auch unter der folgenden Internetadresse abrufbar: <u>https://download.axing.com/BAs/Sicherheitshinweise</u> <u>9sprachig.pdf</u>
- → Benutzen Sie das Gerät ausschließlich wie in dieser Betriebsanleitung beschrieben und insbesondere nach dem Stand der Technik. Wird das Gerät für andere Einsätze verwendet, wird keine Gewährleistung übernommen!



Hiermit erklärt die AXING AG, dass die gekennzeichneten Produkte den geltenden Richtlinien entsprechen.

WEEE Nr. DE26869279 | Elektrische und elektronische Komponenten nicht mit dem Restmüll, sondern separat entsorgen.

# 1. Produktbeschreibung

## 1.1. Allgemeines

- 4 x HDMI in 1 oder 2 × DVB-C/T oder in IPTV (IPTV mit Softwareerweiterung HKS 1-00H)
- Frei wählbare DVB-C/T-Ausgangskanäle
- H.264
- Konvertiert die HDMI-Auflösung 1080p@50/60 Hz zu DVB-konformen 1080p@30 Hz
- Klasse A gemäß EN 50083-2
- Web-basierte Konfiguration, Fernwartung möglich (AXING SMARTPortal)
- Eingebautes Netzteil
- Für Wandmontage oder als 19"-Einheit, 1 HE verwendbar (mit HKZ 1-00)



Der Modulator bietet DVB-C- oder DVB-T-Signale am Ausgang. Durch die Hybridtechnik können diese aber mit der Softwareerweiterung HKS 1-00H um IPTV erweitert werden.

## 1.2. Lieferumfang

- 1 × HKM 40-02H Encoder/Modulator
- 1 × Netzkabel
- 1 × Quickstartanleitung
- 1 × Sicherheitshinweise

## 1.3. Eingang

Der HKM 40-02H verfügt über vier HDMI-Eingänge. Verbinden Sie diese mit vier HDMI-Quellen.

## 1.4. Ausgang

## 1.4.1. DVB-C / DVB-T

Der HKM 40-02H verfügt über vier Modulatoren. Diese werden in einen oder zwei Ausgangskanäle gestreamt.

## 1.4.2. IPTV

Mit der Softwareerweiterung HKS 1-00H kann der IPTV-Ausgang des HKM 40-02H aktiviert werden. Die HDMI-Signale werden dann in vier Single Program Transport Streams (SPTS) umgewandelt und können mit geeigneten Switches über Ethernet verteilt werden.

Die Installation der Softwareerweiterung HKS 1-00H erfolgt ab Werk durch unseren technischen Support. Die Softwareerweiterung muss deswegen beim Kauf der HKM 40-02H mitbestellt werden.

## 1.5. Grafische Benutzeroberfläche

Die Einstellungen werden über eine grafische Benutzeroberfläche vorgenommen. Für den Zugriff auf die Benutzeroberfläche benötigen sie einen handelsüblichen PC/Laptop inklusive Netzwerkschnittstelle mit der aktuellen Version des installierten Webbrowsers.

	RF	VIDEO	AUDIO	STREAM	SYSTEM	Pat of <b>exing</b> group
RF Parameters Setup RF output Advanced RF setting	Set	t <b>up DVB-</b> ntry : Eur	C RF outp	out •		
	Are Free Out Syn Con IQ s	a : Oth uuency : E21 put level : 105 ubol Rate : 6 stellation : QAI wap : 0	(474MHz) dBuV . 900000 M256 enable @ disab	▼ ▼ ] <i>Mbps</i> ▼		
	s	ave Settings	Cancel Cha	anges		

#### Anzeigeelemente und Anschlüsse 1.6.



grün = HDMI-Signal ok grün blinkend = Signal mit geringer Auflösung

aus kein HDMI-Signal =

- 2 Potentialausgleichsanschluss
- 3 Netzanschluss
- 4 HF-Ausgang

1

- 5 Messbuchse -30 dB
- 6 HDMI-Eingänge
- 7 RJ-45-Ethernet-Anschluss IPTV-Ausgang DATA
- RJ-45-Ethernet-Anschluss Control 8

## 2. Montage und Anschluss

- → Montage und Anschluss sind nur von autorisierten Elektrofachkräften durchzuführen.
- → Vor Montage und Anschluss Netzstecker ziehen (1)!

Die HKM 40-02H können entweder an der Wand montiert werden oder in einem 19"-Rack eingebaut werden.

## 2.1. Wandmontage

Der HKM 40-02H ist ab Werk mit Wandhalterungen ausgestattet.

**Hinweise:** Bei Wandmontage wird aus thermischen Gründen dringend empfohlen, das Gerät waagerecht und mit den Anschlüssen nach oben zu montieren. Die Kopfstelle muss mit mindestens 100 mm Freiraum entlang aller 4 Seiten montiert werden.



- → HKM HKM 40-02H auf einer senkrechten, ebenen Fläche montieren (Unebenheiten müssen ggf. ausgeglichen werden).
- $\rightarrow$  Den HKM 40-02H mit mindestens vier 4 × 30 mm Schrauben an der Wand befestigen.

## 2.2. Montage im 19"-Rack

Hinweis: Bei 19-Zoll-Rack Montage muss mindestens einen Freiraum von 5 cm vor und hinter dem Gerät gegeben sein. → Demontieren Sie die Wandhalterung vom Gehäuse des HKM 40-02H.

→ Montieren Sie die Frontplatte HKZ 1-00 am HKM 40-02H (1).



- → Schieben Sie den HKM 40-02H in das 19" Rack.
- → Schrauben Sie den HKM 40-02H mit vier Schrauben fest (2).
- → Halten Sie die EN 60728-11 ein.

## 2.3. Potentialausgleich

Das Gerät und die Außenleiter der Koaxialkabel müssen am Potentialausgleich angeschlossen werden. Dies dient der Vermeidung gefährlicher Überspannungen (Achtung: Brand-/Lebensgefahr) gemäß EN 60728-11.

- → Verwenden Sie den Potentialausgleichsanschluss am Gerät.
- ➔ Um den Außenleiter der Koaxialkabel am Potentialausgleich anzuschließen, verwenden Sie z. B.QEW Erdungswinkel oder CFA 7-01 Erdungsblöcke am Ausgang.

## 2.4. HDMI-Anschluss

Der HKM 40-02H verfügt über vier HDMI-Eingänge. Verbinden Sie diese mit vier HDMI-Quellen.

## 2.5. HF-Ausgang

- → Verbinden Sie den Ausgang des HKM 40-02H mit der vorhandenen Verteilung. Verwenden Sie hierfür hochgeschirmte Koaxialkabel mit F- Anschlusssteckern. Passende Kabel und Stecker finden Sie im aktuellen AXING-Katalog oder unter www.axing.com.
- → Wenn Sie mehrere HKM 40-02H verwenden, dann müssen die Ausgänge mit geeigneten Weichen verbunden werden.

## 2.6. IPTV-Anschluss

- → Schließen Sie den IPTV-Ausgang des Geräts an einem IGMP-fähigen Ethernet-Switch an.
- → Verwenden Sie Cat-7-Kabel oder höher.

## 2.7. Spannungsversorgung

## **▲ VORSICHT**

Das Gerät verfügt über ein eingebautes Netzteil (100...240 VAC/50...60 Hz).

- → Schließen Sie das Gerät erst an, nachdem alle Montage und Installationsarbeiten abgeschlossen sind.
- → Schließen Sie das Netzkabel an einer entsprechenden Steckdose an.
- → Verwenden Sie das mitgelieferte Netzkabel.

# 3. Konfiguration

Die Konfiguration der Geräte erfolgt über die grafische Benutzeroberfläche der integrierten Webschnittstelle.

Für den Zugriff auf die Benutzeroberfläche benötigen sie einen handelsüblichen PC/Laptop inklusive Netzwerkschnittstelle und die aktuelle Version des installierten Webbrowsers. Für die Anbindung der Netzwerkschnittstelle des Gerätes an den Computer benötigen sie ein handelsübliches Netzwerkkabel.

Die Kommunikation erfolgt via HTTP-Protokoll, was eine weltweite Fernwartung der Anlagen über das Internet, an unterschiedlichen Standorten ermöglicht. Der Zugriffsschutz wird mittels Passwortabfrage realisiert.

Ab Werk sind folgende Werte voreingestellt:

➔ IP-Adresse:	192.168.0.168
→ Subnetzmaske:	255.255.255.0.

Der Computer und das Gerät müssen sich im gleichen Teilnetz befinden. Der Netzanteil der IP-Adresse des Computers muss auf 192.168.0. und die Subnetzmaske muss auf 255.255.255.0 eingestellt werden.

Der Hostanteil der Netzwerkadresse ist für die Identifikation der Geräte zuständig und kann nur einmal im Teilnetz vergeben werden. Für den Computer können sie eine noch nicht vergebene Host-Adresse zwischen 0 und 255 vergeben.

## Тірр

Ändern sie die IP-Adresse und die Subnetzmaske ihres Computers entsprechend (z.B.: IP-Adresse:192.168.0.11 und Subnetzmaske: 255.255.255.0).

*Systemsteuerung > Netzwerkverbindungen > LAN Verbindung > Eigenschaften > Internetprotokoll Version 4 TCP/IPv4 > Eigenschaften > Folgende IP-Adresse verwenden:* 



→ Klicken Sie auf OK zum Speichern.

## 3.1. Anmelden

→ Starten sie ihren Webbrowser und geben sie die IP-Adresse des Geräts ein: 192.168.0.168.

Die Benutzeroberfläche ist gegen unbefugten Zugriff geschützt. Beim Zugriff auf die Benutzeroberfläche erfolgt als erstes die Passwortabfrage.



→ Geben sie das werksseitig eingestellte Passwort ein: Ramsen8262 und klicken Sie auf Login.

#### Passwort ändern:

- → Ändern Sie das Passwort sofort nach der ersten Inbetriebnahme und achten Sie auf ein ausreichend sicheres Passwort. Bewahren Sie dieses Passwort an einem sicheren Ort auf.
- → Menüpunkt: System > Set Password (siehe 3.6.6 auf Seite 24).

#### Hinweise:

- Wird der Browser ohne vorherige Abmeldung geschlossen erfolgt nach ca. 2,5 Minuten eine automatische Abmeldung.
- Bleibt das Browserfenster geöffnet, erfolgt keine automatische Abmeldung. Dadurch wird die Überwachnung der Anlage über den Webbrowser ermöglicht.

## 3.2. HF-Einstellungen (RF)



→ Klicken Sie im Hauptmenü auf **OUTPUT**.

## 3.2.1. Parameter für DVB-C oder DVC-T

Beim **HKM 40-02H** werden je nach eingestelltem Modulator unter **Setup RF Output** die Parameter für DVB-C oder DVC-T angezeigt.

Je nachdem, ob eine oder zwei Ausgangskanäle eingestellt sind werden die für die Einstellungen die Schaltflächen **RF1** oder **RF1** und **RF2** angezeigt (wie Sie den Modulator-Typ und die Anzahl der Kanäle wählen, wird unter 3.2.3 auf Seite 14 beschrieben).

#### Bei DVB-C:

RF	Setup RF Output
Setup RF Output Advanced RF Setting	RF 1
IP Streaming	Area : Nordic V
Setup Stream IP Setup Stream Port	Frequency : E21(474MHz) V
IP Stream Status	Symbol Rate : 6900 Kbps
	Constellation : QAM256 V
	Save Settings Cancel Changes

→ Treffen Sie eine Vorauswahl in den Menüs Country und Area.

Je nach getroffener Auswahl werden im Auswahlfeld Frequenzy die landestypischen Kanäle angezeigt.

- → Wählen Sie im Auswahlfeld Output level einen Ausgangspegel von 90...105 dBµV aus.
- → Im Feld Symbol Rate kann die Symbolrate zwischen 1000 und 7500 frei eingestellt werden. Der Standardwert ist 6900. Manche Netzte arbeiten auch mit 6875. Wird mit nur 7MHz Bandbreite gearbeitet, dann ist eine Symbolrate von 6111 gebräuchlich.
- → Wählen Sie im Auswahlfeld Constellation die gewünschte Ausgangsmodulation aus (QAM 16/32/64/128/256). QAM256 ermöglicht die höchste Datenübertragungsrate, erfordert aber auch die beste Netzgualität.
- → Klicken Sie auf **RF2**, um die Einstellungen für den zweiten HF-Ausgangskanal einzugeben.
- → Klicken Sie auf **Safe Settings**, um Ihre Einstellungen zu speichern.

#### Bei DVB-T:

RF	Setup RF Output
Setup RF Output Advanced RF Setting IP Streaming	RF 1 Country : Europe ✓
Setup Stream IP	Area : Germany V Frequency : E21(474MHz) V
Setup Stream Port IP Stream Status	Output level : 105 dBuV ~
	Carrier : O 2K ® 8K Constellation : QAM 64
	FEC : 7/8 🗸
	Guard interval : 1/32 🗸
	RF1 RF2
	Save Settings Cancel Change

→ Treffen Sie eine Vorauswahl mit den in den Menüs Country und Area.

Je nach getroffener Auswahl werden im Auswahlfeld **Frequenzy** die landestypischen Kanäle angezeigt.

→ Wenn Sie im Auswahlfeld Country die Option Others auswählen, dann können Sie die Frequenzen frei eingeben.

#### Setup DVB-T RF output

Country :	Others		۲	<b>⊘</b> 0K
Frequency :	474	. 000		MHz

- → Wählen Sie im Auswahlfeld Output level einen Ausgangspegel von 90...105 dBµV aus.
- → Wählen Sie im Auswahlfeld Constellation die gewünschte Ausgangsmodulation aus (QAM 16/64). QAM64 ermöglicht die höchste Datenübertragungsrate, erfordert aber auch die beste Netzqualität.
- → Wählen Sie im Auswahlfeld FEC den FEC-Faktor aus (1/2, 2/3, 3/4, 5/6 7/8) Durch Änderung des FEC-Faktors wird der Anteil der FEC-Daten im Verhältnis zu den Nutzdaten geändert. (FEC ½ = geringe Datenrate aber starker Fehlerschutz, FEC 7/8 – hohe Datenrate aber geringer Fehlerschutz).
- → Wählen Sie im Feld Guard Intervall das Schutzintervall aus 1/32, 1/16, 1/8, 1/4. Durch dieses Schutzintervall wird bei der DVB-T Übertragung das Symbolübersprechen vermieden. Das Guard-Intervall drückt das Verhältnis der Übertragungspausen zur Nutzdatenübertragungszeit aus. Ein sehr langes Schutzintervall (z. Bsp. 1/4) führt daher zu einer sehr geringen Datenrate. Bei der Übertragung in einem einwandfreien Koaxialen Verteilnetz reicht ein sehr kleines Schutzintervall aus (1/32).
- → Klicken Sie auf RF2, um die Einstellungen für den zweiten HF-Ausgangskanal einzugeben.
- → Klicken Sie auf Safe Settings, um Ihre Einstellungen zu speichern.

## 3.2.2. Erweiterte HF-Einstellungen

RF	Advanced RF Setting
Setup RF Output	RF Port : O 1 Port  © 2 Ports
Advanced RF Setting	MOD select : O DVBT   DVBC
IP Streaming	<u>RF 1</u>
·	Frequency Offset : No offset 🗸 🗸 🗸 🗸 🗸 🗸 🗸
Setup Stream IP	Output Enable :      Enable 〇 Disable
Setup Stream Port	<u>RF 2</u>
IP Stream Status	Frequency Offset : No offset 🗸
	Output Enable : <ul> <li>Enable</li> <li>Disable</li> </ul>
	Save Settings Cancel Changes

- → Mit **RF** Output wählen Sie, ob die Signale in einem (1 Port) oder in zwei Ausgangskanälen (2 Ports) ausgegeben werden.
- → Mit MOD select wählen Sie, ob die Signale in DVB-T oder DVB-C moduliert werden.
- → Nehmen Sie ggf. im Feld Frequenzy offset den Feinabgleich des Ausgangskanal in 10 KHz-Schritten vor.
- → Mit Output Enable wählen Sie, ob der Ausgang aktive (Enable) oder nicht aktiv (Disable) ist.

→ Klicken Sie auf **Safe Settings**, um Ihre Einstellungen zu speichern.

**Hinweis:** Umstellungen der Modulationsart und der Anzahl der Ausgangskanäle führen zu einem Neustart der Kopfstelle.

Please wait for 68s.

## 3.3. IPTV-Einstellungen

Mit der Softwareerweiterung HKS 1-00H kann der IPTV-Ausgang des HKM 40-02H aktiviert werden. Die Installation der Softwareerweiterung HKS 1-00H erfolgt ab Werk durch unseren technischen Support. Die Softwareerweiterung muss deswegen beim Kauf der HKM 40-02H mitbestellt werden.

## 3.3.1. Setup Stream IP

#### **Dynamische IP-Adresse**

→ Wählen Sie bei DHCP die Option enable, um das Gerät in ein IPTV-Netzwerk mit DHCP-Server einzubinden. Die Kopfstelle erhält dann vom DHCP-Server im IPTV-Netzwerk die IP-Adresse, Netzmaske und Gateway-Adresse.

#### **Statische IP-Adresse**

→ Wählen Sie bei DHCP die Option disable, um das Gerät mit einer fest vergebenen IP-Adresse in ein IPTV-Netzwerk einzubinden. Geben Sie in diesem Fall die IP-Adresse, die Netzmaske und die Gateway-Adresse ein.

RF	Setup Stream	m IP
Setup RF Output	DHCP :	$lacksquare$ enable $\bigcirc$ disable
Advanced RF Setting	Source IP :	192.168.0.68
IP Streaming	Net Mask :	255.255.255.0
	Default Gateway :	192.168.0.1
Setup Stream IP		
Setup Stream Port	Save Settings	Cancel Changes
IP Stream Status		

→ Klicken Sie auf **Safe Settings**, um Ihre Einstellungen zu speichern.

## 3.3.2. Setup Stream Port

Für jede HDMI-Quelle (1 ... 4) geben Sie sie die Parameter für den Stream Port vor.

- → Wählen Sie bei Protocol ob der Ausgangsstream gemäß RTP oder UDP ausgegeben werde soll.
- → Wählen Sie unicast IP oder multicast IP und geben Sie die entsprechende IP-Adresse ein.
- → Geben Sie zuätzlich den *Receiver Port* ein.

RF	Setup Strea	m Port		
Setup RF Output	HDMI 1	E	<u>HDMI 2</u>	
Advanced RF Setting	Protocol :	• RTP O UDP P	rotocol :	$\odot$ RTP $\bigcirc$ UDP
IP Streaming	○ unicast IP	192.168.0.69	🔿 unicast IP	192.168.0.69
I Ŭ	multicast IP	239.255.0.1	multicast IP	239.255.0.1
Setup Stream IP	Receiver Port :	59268 R	Receiver Port :	59270
Setup Stream Port	HDMI 3	н	HDMI 4	
IP Stream Status	Protocol :	• RTP O UDP P	rotocol :	● RTP ○ UDP
	○ unicast IP	192.168.0.69	🔿 unicast IP	192.168.0.69
	multicast IP	239.255.0.1	multicast IP	239.255.0.1
	Receiver Port :	59272 R	Receiver Port :	59274
	Save Settings	Cancel Changes		

→ Klicken Sie auf Safe Settings, um Ihre Einstellungen zu speichern.

## 3.3.3. IP Stream Status

Ť.

Unter IP Stream Status werden die Status zum IP-Stream angezeigt.

RF	IP Stream S	Status
Setup RF Output	DHCP :	Success
Advanced RF Setting	Source IP :	192.168.0.100
<b>IP</b> Streaming	Net Mask :	255.255.255.0
·	Default Gateway	192.168.0.1
Setup Stream IP		
Setup Stream Port		
IP Stream Status		

## 3.4. Video



→ Klicken Sie im Hauptmenü auf Video.

Die Video-Einstellungen können für jede HDMI-Quelle (1 ... 4) vorgenommen werden.

→ Wählen Sie für **RF Output** ob HF ausgegeben werden soll oder nicht (*ON/OFF*)

→ Wählen Sie für IP Output ob ein IPTV-Stream ausgegeben werden soll oder nicht (ON/OFF)

Das Feld **Resolution** zeigt die Auflösung der angeschlossenen Video-Quelle an.

Video	Set Video			
Set Video	HDMI 1	(for RF1)	HDMI 2	(for RF1)
	RF Output :	$\odot$ on $\bigcirc$ off	RF Output :	$\odot$ on $\bigcirc$ off
	IP Output :	$\bigcirc$ on $\circledast$ off	IP Output :	$\bigcirc$ on $\circledast$ off
	Resolution :	1920X1080/50I	Resolution :	1920X1080/50I
	Encoder Rate :	AUTO 🗸	Encoder Rate :	AUTO 🗸
	Actual Rate :	14 Mbps	Actual Rate :	14 Mbps
	HDMI 3	(for RF2)	HDMI 4	(for RF2)
	RF Output :	$\odot$ on $\bigcirc$ off	RF Output :	$\odot$ on $\bigcirc$ off
	IP Output :	$\bigcirc$ on $\circledast$ off	Output :	$\bigcirc$ on $\circledast$ off
	Resolution :	1920X1080/50I	Resolution :	1920X1080/50I
	Encoder Rate :	AUTO 🗸	Encoder Rate :	AUTO 🗸
	Actual Rate :	14 Mbps	Actual Rate :	14 Mbps
	Save Settings	Cancel Change	es	

→ Stellen Sie für jede Video-Quelle die Encoder Rate auf Auto oder wählen Sie einen Wert zwischen 4...14 Mbps.

**OX** 

Wenn Sie **Auto** wählen, dann achten Sie darauf, dass die Ausgangsdatenrate nicht überschritten wird. Das Feld **Actuel Rate** zeigt die Bitrate an.

→ Klicken Sie auf Safe Settings, um Ihre Einstellungen zu speichern.

## 3.5. Audio



→ Klicken Sie im Hauptmenü auf Audio.

Die Einstellungen für die Audio-Quelle können für jeden der vier Eingangs-Ports vorgenommen werden.

Audio	Set Audio
Set Audio	HDMI 1 Encoder rate : 128 Kbps 🗸
	HDMI 2 Encoder rate : 128 Kbps 🗸
	HDMI 3 Encoder rate : 128 Kbps 🗸
	HDMI 4 Encoder rate : 128 Kbps 🗸
	Save Settings Cancel Changes

→ Stellen Sie für jede Audio-Quelle im Feld Encoder Rate die Bitrate auf 128, 192, 256 oder 384 Kbps.

→ Klicken Sie auf Safe Settings, um Ihre Einstellungen zu speichern.

## **3.6.** Ausgangs-Streams



→ Klicken Sie im Hauptmenü auf Stream.

Für jeden der vier Ausgangs-Streams können verschiedene Einstellungen vorgenommen werden.

#### 3.6.1. Service

Stream	Set Service	
Set Service	HDMI 1	HDMI 2
Set LCN	Service ID : 1	Service ID : 17
Set PID	Service Name : HDCH-1	Service Name : HDCH-2
Set NIT	Provider Name : DTV	Provider Name : DTV
Set PDS	Service Type : ADV HD Service 🗸	Service Type : ADV HD Service 🗸
Set TS ID	HDMI 3	HDMI 4
	Service ID : 33	Service ID : 49
	Service Name : HDCH-3	Service Name : HDCH-4
	Provider Name : DTV	Provider Name : DTV
	Service Type : ADV HD Service 🗸	Service Type : ADV HD Service 🗸
	Save Settings Cancel Change	ges

- → Geben Sie im Feld Service ID eine ID zwischen 1 und 65535 ein. Die Service IDs aller Streams im Netztwerk müssen eindeutig sein.
- → Geben Sie im Feld Service Name einen maximal 15stelligen Namen ein. Dieser wird im TV-Gerät nach dem Suchlauf als Programmnamen angezeigt.
- → Geben Sie im Feld **Provider Name** einen maximal 15stelligen Namen ein.
- → Wählen Sie im Auswahlfeld Service Type für jeden Stream aus, ob er in HD, SD, ADV HD oder ADV SD. ausgegeben wird.
- → Klicken Sie auf Safe Settings, um Ihre Einstellungen zu speichern.



## 3.6.2. LCN

Stream	Set LCN
Set Service	HDMI 1 LCN : 200
Set LCN	HDMI 2 LCN : 201
Set PID	HDMI 3 LCN : 202
Set NIT	HDMI 4 LCN : 203
Set PDS	
Set TS ID	Save Settings Cancel Changes

→ Geben Sie im Feld LCN eine Logical Channel Number zwischen 1 und 1023 ein. Wenn die angeschlossenen TV-Geräte LCN unterstützen, dann wird der jeweilige Stream unter dem eingegebenen Programmplatz abgelegt.

→ Klicken Sie auf Safe Settings, um Ihre Einstellungen zu speichern.

÷

## 3.6.3. PID

Änderungen der Packet Identifier sollten nur von erfahrenen Nutzern durchgeführt werden.

Stream	Set PID	
Set Service	<u>HDMI 1</u>	HDMI 2
Set LCN	PMT PID : 129	PMT PID : 130
Set PID	PCR PID : 768	PCR PID : 769
Set NIT	Video PID : 2064	Video PID : 2065
Set PDS	Audio PID : 2068	Audio PID : 2069
Set TS ID	HDMI 3	<u>HDMI 4</u>
	PMT PID : 131	PMT PID : 132
	PCR PID : 770	PCR PID : 771
	Video PID : 2066	Video PID : 2067
	Audio PID : 2070	Audio PID : 2071
	Save Settings Cancel C	hanges

→ Geben Sie die PMT PID für (Program Map Table), die PCR PID (Program Clock Reference) sowie die Video PID und Audio PID in die entsprechenden Felder ein.

→ Klicken Sie auf Safe Settings, um Ihre Einstellungen zu speichern.

### 3.6.4. NIT

In die NIT-Einstellung muss nur in Netzen mit mehreren Kopfstellen eingegriffen werden. Änderungen sollten nur von erfahrenen Nutzern durchgeführt werden.

Stream	Set NIT	
Set Service	HDMI 1	HDMI 2
Set LCN	OrgNetwork ID : 8438	OrgNetwork ID : 8438
Set PID	Network ID : 1	Network ID : 1
Set NIT	Network Name : NETWORK	Network Name : NETWORK
Set PDS	Network Ver : 1	Network Ver : 1
Set TS ID	HDMI 3	HDMI 4
	OrgNetwork ID : 8438	OrgNetwork ID : 8438
	Network ID : 1	Network ID : 1
	Network Name : NETWORK	Network Name : NETWORK
	Network Ver : 1	Network Ver : 1
	Save Settings Cancel Change	es

→ Geben Sie die OrgNetwork ID, die Network ID (Program Clock Reference) sowie den Network Name und die Network Ver in die entsprechenden Felder ein.

→ Klicken Sie auf Safe Settings, um Ihre Einstellungen zu speichern.

#### 3.6.5. PDS

Das Feld **PDS** dient zur Eingabe einer Private Data Specification. Es ist ein binäres 8-Bit-Feld, zulässig sind Werte von 00000000 bis 11111111.

Stream	Set PDS
Set Service	HDMI 1 PDS : 00000029
Set LCN	HDMI 2 PDS : 00000029
Set PID	HDMI 3 PDS : 00000029
Set Network	HDMI 4 PDS : 00000029
Set PDS	
Set TS ID	Save Settings Cancel Changes

→ Geveb Sie die PDS für alle vier Ausgangs-Streams ein.

→ Klicken Sie auf Safe Settings, um Ihre Einstellungen zu speichern.



## 3.6.6. Transportstream ID

Die **TS ID** (Transportstream ID) muss für jeden Transportstream eindeutig sein. Wenn weitere Transportstreams in Ihrem DVB-C/T-Netz vorkommen, müssen Sie ggf. hier eine andere ID vergeben.

Stream	Set TS ID
Set Service	(RF1)HDMI 1 TS ID : 1
Set LCN	HDMI 2 TS ID : 2
Set PID	(RF2) HDMI 3 TS ID : 3
Set NIT	HDMI 4 TS ID : 4
Set PDS	
Set TS ID	Save Settings Cancel Changes

→ Klicken Sie auf **Safe Settings**, um Ihre Einstellungen zu speichern.

## 3.7. System

→ Klicken Sie im Hauptmenü auf System.

Im Menüpunkt **System** kann das System zurückgesetzt werden, ein Softwareupdate durchgeführt, die IP-Adresse geändert, ein neues Passwort vergeben.

#### 3.7.1. Reset

System	System Reset
Reset System	Reset Mode : Please Select ✔
Retrieve Inventory	
Upgrade Code	System Reset
Set IP	
Set Language	
Set Password	
SMARTPortal	

- → Wählen Sie im Feld Reset Mode, ob Sie einen Hardware-Reset durchführen möchten, oder ob Sie den HKM 40-02H auf seine Werkseinstellungen zurücksetzen wollen.
- → Klicken Sie auf System Reset, um den Reset durchzuführen.

## 3.7.2. Systemdaten

Unter Retrieve Inventory finden Sie die aktuellen Versionstände des HKM 40-02H.

System	<b>Retrieve Inventory</b>
Reset System	Software Version : 0.11
Retrieve Inventory	Software Date : Sep 19 2023
Upgrade Code	Hardware Version : 1.1
Set IP	Database Version : 0.01
Set Language	
Set Password	
SMARTPortal	

#### 3.7.3. Software-Upgrade

Unter Upgrade Software kann die Software aktualisiert werden.

- Den Versionsstand der derzeit installierten Software finden Sie im Menüpunkt "Retrieve Inventory".
- Den Versionsstand der aktuell verfügbaren Software finden Sie im Internet: <u>https://axing.com/downloads/software-und-firmware/</u>
   Software für Encoder

Die Software wird direkt vom Remote-Server heruntergeladen. Dies setzt eine bestehende Verbindung des HKM 40-02H zum Internet vorraus.

System	<b>Upgrade Software</b>
Reset System	Download From : 
Retrieve Inventory	Reboot Mode : $<$ Just Reboot $\bigcirc$ Restore to Default
Upgrade Code	Upgrade Software
Set IP	
Set Language	
Set Password	
SMARTPortal	

- → Wählen Sie Download From **Remote Server**.
- → Klicken Sie auf Upgrade Software.

Der HKM stellt eine Verbindung zum Remoteserver her und lädt die Software herunter. Der Download-Fortschritt wird angezeigt.



Anschließend beginnt das Upgrade des Geräts. Die verbleibende Zeit wird angezeigt.

Please wait 51s to Reboot and Config New Firmware

Schalten Sie das Gerät währen des Upgrades auf keinen Fall aus!

## 3.7.4. IP-Adresse

#### **Dynamische IP-Adresse**

→ Wählen Sie bei Enable DHCP die Option enable, um das Gerät in ein Netzwerk mit DHCP-Server einzubinden. Die Kopfstelle erhält dann vom DHCP-Server im Netzwerk IP-Adresse, Netzmaske und Gateway-Adresse.

#### Statische IP-Adresse

→ Wählen Sie bei Enable DHCP die Option disable, um das Gerät mit einer fest vergebenen IP-Adresse in ein Netzwerk einzubinden. Geben Sie in diesem Fall die IP-Adresse, die Netzmaske und die Gateway-Adresse ein.

System	Set IP
Reset System	Enable DHCP : O enable I disable
Retrieve Inventory	IP Address : 192.168.0.168
Upgrade Code	Net Mask : 255.255.255.0
Set IP	Default Gateway : 192.168.0.1
Set Language	
Set Password	Save Settings Cancel Changes
SMARTPortal	

→ Klicken Sie auf Safe Settings, um Ihre Einstellungen zu speichern.

Nach dem die Änderungen gespeichert wurden, wird der HKM 40-02H automatisch neu gestartet.

→ Nach dem Neustart müssen Sie die neue IP-Adresse im Browser eingeben und sich erneut anmelden.

## 3.7.5. Sprache

Hier können Sie die Sprache der Oberfläche auswählen.

System	Set Language	
Reset System	Language : English	
Retrieve Inventory		
Upgrade Code	Save Settings Cancel Changes	
Set IP		
Set Language		
Set Password		
SMARTPortal		

→ Klicken Sie auf Safe Settings, um Ihre Einstellungen zu speichern.

#### 3.7.6. Passwort

Das werkseitig eingestellte Passwort lautet: Ramsen8262.

Nach der ersten Inbetriebnahme der Kopfstelle sollte das werkseitig eingestellte Passwort geändert werden.

System	Set Password	
Reset System	Password :	
Retrieve Inventory	Confirm Password :	
Upgrade Code		
Set IP	Save Settings Cancel Changes	
Set Language		
Set Password		
SMARTPortal		

- → Geben Sie ein neues Passwortes mit 8 bis 10 Buchstaben und/oder Zahlen ein.
- → Geben Sie das Passwort erneut ein.
- → Klicken Sie auf Safe Settings, um Ihre Einstellungen zu speichern.

Nach dem die Änderungen gespeichert wurden, wird die Startseite eingeblendet, Sie müssen sich neu anmelden.



## 3.7.7. SMARTPortal

Wenn Sie registrierter Nutzer des SMARTPortals sind, dann können Sie den Encoder über das SMARTPortal fernwarten und ggf. Support von AXING erhalten.

Vorraussetzung ist eine Internetverbindung des Encoders.

System	SMARTPortal			
Reset System	State : <ul> <li>enable</li> <li>disable</li> </ul>			
Retrieve Inventory	Axing support : $\textcircled{o}$ allowed $\bigcirc$ not allowed			
Upgrade Code	Email address : anyone@anywhere.com (At most 40 characters) OK			
Set IP	Userkey :			
Set Language				
Set Password	Device Type : HKM40-20H headend			
SMARTPortal	Serial No. : 2496815			
	Device Name : HKM 40-02H (At most 16 characters)			
	Location : Anywhere (At most 16 characters) OK			
	Save Settings Cancel Changes Default			

- → Wählen Sie bei State die Option enable.
- → Aktivieren Sie bei AXING Support, wenn gewünscht, die Option allowed.
- → Geben Sie im Feld Email address die E-Mail-Adresse ein, mit der Sie sich im SMARTPortal registriert haben.
- → Geben Sie im Feld **Userkey** den Benutzercode ein, den Sie bei der Registrierung am SMARTPortal erhalten haben.
- → Geben Sie im Feld **Device Name** eine Bezeichnung für das Gerät ein. Diese Bezeichnung erscheint später im SMARTPortal und hilft Ihnen dabei das Gerät zu identifizieren.
- → Geben Sie im Feld **Standort** eine Bezeichnung des Standorts für das Gerät ein. Diese Bezeichnung erscheint später im SMARTPortal und hilft Ihnen dabei das Gerät zu identifizieren.

→ Klicken Sie auf **Save Settings**.

Die Daten werden gespeichert und die Verbindung zum SMARTPortal wird hergestellt.

# 4. Technische Daten

Тур	НКМ 40-02Н		
Eingänge			
Anzahl	$4 \times HDMI$		
Unterstützte Protokolle	HDMI 1.3, 1.4a HDCP 1.4		
Video-Auflösung	1080p@50 Hz   1080p@60 Hz		
Max. Bitrate pro Kanal	14 Mbit/s		
Audio-Encoder	MPEG-1 audio layer II		
Video-Encoder	H.264 (MPEG-4)		
Ausgang			
Anzahl Kanäle	1 oder 2 × DVB-C/DVB-T		
Frequenzbereich	110 862 MHz		
Kanäle auswählbar	S2 E69		
Anschluss	1 × F-Buchse		
Messbuchse	1 × F-Buchse (–30 dB)		
Impedanz	75 Ω		
Ausgangspegel einstellbar	90 105 dBμV		
Video-Auflösung	1080p@25 Hz   1080p@30 Hz		
Ausgangsmodulation			
Тур	16QAM, 32QAM, 64QAM, 128QAM, 256QAM @ DVB-C 16QAM, 64QAM @ DVB-T		
MER	≥ 40 dB @ DVB-C ≥ 36 dB @ DVB-T		
Bitrate, max.	50,87 Mbps @ DVB-C   31,668 Mbps @ DVB-T		
FFT	2K, 8K mode @ DVB-T		
FEC	1/2, 2/3, 3/4, 5/6, 7/8 @ DVB-T		
Schutzintervall	1/4, 1/8, 1/16, 1/32		
Symbolrate	2 6,96 MBaud/s		
IP-Ausgang			
Transportstreams	$4 \times SPTS$		
Gesamtnettodatenrate	56 Mbps		
Unterstützte Transportprotokolle	UDP		
Unterstützte Anwendungsprotokolle	RTP		
Schnittstellen			
Ethernet-Anschlüsse (LAN)	2 × RJ 45		



Ethernet-Normen	IEEE 802.3, 100 Base-T
Unterstützte Konfigurations-Protokolle	HTTP, AXING SMARTPortal**
Allgemein	
Betriebsspannung	100 240 VAC/50 60 Hz
Leistungsaufnahme	25 W
Betriebstemperaturbereich (gemäß EN 60065)	−10 °C +50 °C
Maße (B $\times$ H $\times$ T) ca.	480 × 253 × 47 mm
Gewicht	2,900 kg
Anmerkungen	*nur mit Softwareerweiterung ** verschlüsselte, Cloud-basierte Anwendung, zur Konfiguration, Überwachung und Fernwartung

Hersteller | Manufacturer AXING AG Gewerbehaus Moskau 8262 Ramsen EWR-Kontaktadresse | EEA contact address Bechler GmbH Am Rebberg 44 78239 Rielasingen



# **CHP** - Compact High Performance Headends

# **HKM 40-02H** HDMI | DVB-C/T/IPTV encoder/modulator

# **Operation instructions**







# Table of contents

1.	Produc	t description	. 4
1.1	I. G	ieneral	. 4
1.2	<u>2.</u> S	cope of delivery	. 4
1.3	3. Ir	nput	. 4
1.4	I. 0	Output/modulators	. 5
	1.4.1.	DVB-C / DVB-T	. 5
	1.4.2.	IPTV	. 5
1.5	5. G	araphical user interface	. 5
1.6	5. D	Display elements and connectors	. 6
2	Mount	ting and Installation	7
2.	Widding	Vall mounting	7
2.1	). V	Acumating in a 19"rack	. / Q
2.2	2. IV 2. E	auinotontial handing	. U Q
2.2	). L I Ц	Jupotential bolighting	.0
2.4	н. П С D	IDIVIT ITIStallation	.0
2.3	). N : II	r Oulpul DTV autaut	.0
2.0	ס. ור ס ז		. 9
Z.1	. г	ower supply	.9
3.	Config	uration	10
3.1	I. L	ogin	11
3.2	2. R	F settings	12
	3.2.1.	Parameters for DVB-C or DVC-T	12
	3.2.2.	Advanced RF settings	14
3.3	8. IF	PTV settings	15
	3.3.1.	Setup Stream IP	15
	3.3.2.	Setup Stream Port	15
	3.3.3.	IP Stream Status	16
3.4	1. V	/ideo	16
3.5	5. A	udio	17
3.6	5. C	Dutput streams	18
	3.6.1.	Service	18
	3.6.2.	LCN	19
	3.6.3.	PID	19
	3.6.4.	NIT	20
	365	PDS	20
	366	Transportstream ID	21
37	γ γ	vstem	21
517	371	Reset	21
	372	Restrieve Inventory	22
	373	Ungrade Software	22
	371	IP Adress	 22
	275		22
	276	Daccword	∠.) 7/
	ט.ו.כ. 277	r assworu	24 25
	J././.		23
4.	Techni	cal specifications	26

# **▲ WARNING**

- → Observe the safety instructions supplied with the device! They are also available at the following Internet address: <u>https://download.axing.com/BAs/Sicherheitshinweise\_9sprachig.pdf</u>
- → Use the device only as described in these operating instructions and in particular in accordance with the state of the art. If the device is used for other purposes, no warranty will be assumed!



Herewith AXING AG declares that the marked products comply with the valid guidelines.

WEEE Nr. DE26869279 | Electrical and electronic components must not be disposed of as residual waste, it must be disposed of separately.

## 1. Product description

## 1.1. General

- 4 x HDMI into 1 or 2 × DVB-C/T or in IPTV (IPTV with HKS 1-00H)
- Freely selectable DVB-C/T output channels
- H.264
- Converts the HDMI resolution 1080p@50/60 Hz to DVB-compliant 1080p@30 Hz
- Class A according to EN 50083-2
- Web-based configuration, remote maintenance (SMARTPortal)
- Built in power supply
- Can be used for wall mounting or as a 19" unit, 1 RU (with HKZ 1-00)



The HKM 40-02H initially offers DVB-C or DVB-T signals at the output as usual. However, due to the hybrid technology, these can be extended to include IPTV with the software extension HKS 1-00H.

## 1.2. Scope of delivery

- $1 \times HKM 40-02H$  Encoder/Modulator
- $1 \times AC$  power cord
- 1 × Quick start guide
- 1 × Safety instructions

## 1.3. Input

The HKM 40-02H has four HDMI inputs. Connect them to four HDMI sources.

## 1.4. Output/modulators

## 1.4.1. DVB-C / DVB-T

The HKM 40-02H has four output modulators. Theese will be streamed into one or two output channels.

## 1.4.2. IPTV

The IPTV output of the HKM 40-02H can be activated with the software extension HKS 1-00H. The HDMI signals are then converted into four Single Program Transport Streams (SPTS) and can be distributed via Ethernet using suitable switches.

The HKS 1-00H software extension is installed ex works by our technical support team. The software extension must therefore also be ordered when purchasing the HKM 40-02H.

## 1.5. Graphical user interface

The settings can be changed via the graphical user interface. To access the user interface and thus configure the devices, you need a standard PC/laptop with a network interface and the actual version of the installed web browser.

	RF	VIDEO	AUDIO	STREAM	SYSTEM	Part of <b>exing</b> group
RF Parameters Setup RF output Advanced RF setting	Set Cou Are Free Syn Con IQ 8	tup DVB- ntry : Eur a : Oth quency : E21 put level : 105 stellation : QAIA	C RF outp ope ers (474MHz) dBuV 	v v v Mbps v le		
	s	ave Settings	Cancel Ch	anges		

## 1.6. Display elements and connectors



1 4 LEDs for the input signal:

green = HDMI signal ok

green flashing = low resolution signal

out = no HDMI signal

- 2 Equipotential bonding connection
- 3 Mains connection
- 4 RF output
- 5 Test port (–30 dB)
- 6 HDMI inputs
- 7 RJ-45 Ethernet connector IPTV output
- 8 RJ-45 Ethernet connector Control

#### Competence in Communication Technologies

## 2. Mounting and Installation

- → Installation must be performed by authorized and skilled electricians only.
- → Before mounting and installation, pull the mains plug (1)!

The HKM 40-02H can be mounted on either at the wall or be mounted in a 19 "rack.

## 2.1. Wall mounting

The HKM 40-02H are factory-fitted with wall brackets.

**Note:** When wall mounting, for thermal reasons we strongly recommend that you mount the device horizontally and with the connections facing upwards. The headend must be wall mounted with at least 100 mm clearance along the 4 sides.



- → The installation must be carried out on an even and vertical surface (any unevenness must be compensated).
- $\rightarrow$  Fix the HKM 40-02H with with minimum four pcs of 4  $\times$  30 mm screws.
- → The HKM 40-02H must be connected to the equipotential bonding according to EN 60728-11. Use the equipotential bonding connection attached to the device (3).

## 2.2. Mounting in a 19" rack

Note: For 19-inch rack mounting, there must be at least 5 cm clearance in front of and behind the unit.

- $\rightarrow$  Remove the wall bracket from the housing of the HKM 40-02H.
- → Mount the front plate HKZ 1-00 onto the HKM 40-02H (1).



- → Slide the HKM 40-02H into the 19 "rack.
- → Fix the HKM 40-02H with four screws (2).
- → Maintain the EN 60728-11.

## 2.3. Equipotential bonding

The device and the outer conductors of the coaxial cable must be connected to the equipotential bonding. This serves to avoid dangerous overvoltages (caution: fire/life hazard) according to EN 60728-11.

- → Use the equipotential bonding connection at the device.
- → Use, for example, a CFA 7-01 earth connection block at the RF output of the device.

## 2.4. HDMI installation

The HKM 40-02H has four HDMI inputs. Connect them to four HDMI sources.

## 2.5. RF Output

Connect the output of the HKM 40-02H to the existing distribution network. Use shielded coaxial cables with F connectors. You can find suitable cables and connectors in the current AXING catalog or at www.axing.com. If you are using more than one HKM 40-02H, the outputs must be connected with suitable combiner.



## 2.6. IPTV output

- → Connect the IPTV output of the device to an IGMP-capable Ethernet switch.
- → Use Cat 7 cable or higher.

## 2.7. Power supply

Ŵ

## 

The HKM 40-02H have a built-in power supply (100 ... 240 VAC / 50 ... 60 Hz).

- → Do not connect the device unit until all assembly and installation work has been completed.
- → Use the supplied power cord.
- → Connect the power cord to an appropriate wall outlet.

## 3. Configuration

The device is configured via the graphical user interface of the integrated web interface.

To access the user interface, you need a standard PC/laptop with a network interface and the actual version of the installed web browser. To connect the network interface of the device to the computer, you need a commercially available network cable.

The HTTP protocol is used for communication allowing a worldwide remote maintenance of the systems at various locations via the Internet. Access protection is implemented by means of the password prompt.

The following values are preset ex factory:

- IP address: 192.168.0.168
- Subnet mask: 255.255.255.0.

The computer and the headend must be in the same subnetwork. The network part of the IP address of the computer must be set to 192.168.0. and the subnet mask must be set to 255.255.255.0.

The host part of the network address is required for the identification of the devices and can be assigned in the subnetwork only once. You can allocate to the computer any not allocated host address between 0 and 255.

#### Hint:

Change the IP address and the subnet mask of your computer accordingly. (e.g.: IP address:192.168.0.11 and subnet mask: 255.255.255.0)

Control panel > Network connections > LAN connection >Properties > Internet protocol version 4 TCP/IPv4 > Properties > Use the following IP address:

neral	Networking Sharing	General
IPv4 Connectivity: No Internet access IPv6 Connectivity: No network access	Connect using:	You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.
Media State: Enabled	Configure	Obtain an IP address automatically
Duration: 00:31:30	This connection uses the following items:	Use the following IP address:
Speed: 1.0 Gbps Details ctivity	☑         ■ OoS Packet Scheduler         ▲           ☑         → Microsoft Network Adapter Multiplexor Protocol         ■           ☑         → Microsoft LLDP Protocol Driver         ■           ☑         → Link-Layer Topology Discovery Mapper I/O Driver         ■           ☑         → Link-Layer Topology Discovery Responder         ■           ☑         → Link-met Protocol Version 6 (TCP/IPv6)         ■	IP address:         192.168.0.11           Subnet mask:         255.255.0           Default gateway:         .
Sent — Received	Internet Protocol Version 4 (TCP/IPv4)	Otan DNS server address automatically     Otse the following DNS server addresses:
Bytes: 105.051 404.735	Install Uninstall Properties	Preferred DNS server:
	Description	Alternate DNS server:
Properties Disable Diagnose	Transmission Control Protocol/Internet Protocol. The default wide area network protocol that provides communication across diverse interconnected networks.	Validate settings upon exit Advanced

→ Click OK to save.

## 3.1. Login

→ Start your web browser and enter the IP address of the device: 192.168.0.168.

The web-based user interface is protected against unauthorized access. When accessing the user interface, the first thing is the password request.

System Login	
Password :	
Login	

→ Enter the default password: *Ramsen8262*.

## Changing the password:

- → Please change the password immediately after the first commissioning and choose a sufficiently safe password. Keep this password at a safe place.
- → Menu item: System > Set password (see 3.6.6 on page 24).

#### Notes:

- If the browser is closed while you are still logged in, an automatic logout occurs 2.5 minutes later.
- If the browser window stays open, there is no automatic logout. It allows monitoring the installation via the web browser.

## 3.2. RF settings



→ Click **OUTPUT** on the main menu.

## 3.2.1. Parameters for DVB-C or DVC-T

Depending on the modulator selected, under **Setup RF Output** the Parameters for DVB-C or DVB-T are displayed. Depending on whether one or two output channels are set, the buttons **RF1** or **RF1** and **RF2** are displayed for the settings (how to select the modulator type and number is described under 3.2.3 on page 13).

#### DVB-C

RF	Setup RF Output		
Setup RF Output Advanced RF Setting IP Streaming	RF1 Country : Europe		
Setup Stream IP Setup Stream Port IP Stream Status	Frequency : E21(474MHz) V Output level : 105 dBuV V Symbol Rate : 6900 Kbps		
	RF1 RF2 Save Settings Cancel Changes		

→ Make a pre-selection using the Country and Area menus.
Depending on the selection made, the country-specific channels are displayed in the Frequency field.

- → Select an output level of 90 ... 105 dBµV in the **Output level** selection field.
- → The symbol rate between 1000 and 7500 can be freely set in the Symbol Rate field. The default value is 6900.
  Some networks also work with 6875. If working with only 7MHz bandwidth, a symbol rate of 6111 is in use.
- → In the Constellation selection field, select the desired output modulation (QAM 16/32/64/128/256). QAM256 provides the highest data transfer rate, but also requires the best network quality.
- → Click **RF2** to enter the settings for the second RF output channel.
- → Click Safe Settings to save your settings.

DVB-T	
-------	--

RF	Setup RF Output
Setup RF Output	<u>RF 1</u>
Advanced RF Setting	Country : Europe 🗸
In Streaming	Area : Germany 🗸
Setup Stream IP	Frequency : E21(474MHz) 🗸
Setup Stream Port	Output level : 105 dBuV 🗸
in otroum otatas	Carrier : O 2K
	Constellation : QAM 64 🗸 🗸
	FEC : 7/8 🗸
	Guard interval : 1/32 🗸
	RF1 RF2
	Save Settings Cancel Change

→ Make a pre-selection using the Country and Area menus.
Depending on the selection made, the country-specific channels are displayed in the Frequency field.

→ If you select Others in the Country field, you can enter the frequencies freely.

#### Setup DVB-T RF output

OXI

Country :	Others		• 🤇	OK
Frequency :	474	. 000		MHz

- → Select an output level of 90 ... 105 dBµV in the Output level selection field.
- → In the Constellation selection field, select the desired output modulation (QAM 16/64). QAM64 allows the highest data transfer rate, but also requires the best network quality.
- → In the FEC selection field, select the FEC factor (1/2, 2/3, 3/4, 5/6 7/8).
  By changing the FEC factor, the proportion of the FEC data is changed in relation to the user data. (FEC ½ = low data rate but strong error protection, FEC 7/8 high data rate but low error protection).
- → In the Guard Interval field, select the protection interval from 1/32, 1/16, 1/8, 1/4. This protection interval avoids the symbol overflow during DVB-T transmission. The guard interval expresses the ratio of the transmission pauses to the useful data transmission time. A very long protection interval (eg 1/4) leads to a very low data rate. When transmitting in a faultless coaxial distribution network, a very small protection interval is sufficient (1/32).
- $\rightarrow$  Click **RF2** to enter the settings for the second **RF** output channel.
- → Click Safe Settings to save your settings.

## 3.2.2. Advanced RF settings

RF	Advanced RF Setting		
Setup RF Output	RF Port : O 1 Port   2 Ports		
Advanced RF Setting	MOD select : O DVBT   DVBC		
IP Streaming	<u>RF 1</u>		
1	Frequency Offset : No offset 🗸 🗸 🗸 🗸 🗸 🗸 🗸		
Setup Stream IP Setup Stream Port IP Stream Status	Output Enable :		
	<u>RF 2</u> Frequency Offset : No offset ✓		
	Output Enable :		
	Save Settings Cancel Changes		

- → With **RF Output** you select whether the signals are transmitted in one (1 Port) or two output channels (2 Ports).
- → In the MOD select field, set whether the signals are modulated in DVB-T or DVB-C
- → If necessary, enter the fine adjustment of the output channel in 10 kHz steps in the Frequency offset field.
- → With Output Enable you select whether the output is active (Enable) or not active (Disable).
- → Click Safe Settings to save your settings.

Note: Changing the modulation type and the number of output channels will restart the head-end.

Please wait for 68s.

## 3.3. IPTV settings

The IPTV output of the HKM 40-02H can be activated with the software extension HKS 1-00H. The HKS 1-00H software extension is installed ex works by our technical support team. The software extension must therefore also be ordered when purchasing the HKM 40-02H.

#### 3.3.1. Setup Stream IP

#### **Dynamic IP address**

→ For DHCP, select enable to include the device in a network with a DHCP server.

The headend then receives the IP address, netmask and gateway address from the DHCP server in the IPTV network.

#### Static IP address

→ For Enable DHCP, select disable to link the device to a network with a fixed IP address. In this case, enter the IP address, the netmask and the gateway address.

RF	Setup Stream IP		
Setup RF Output	DHCP : (i) enable $\bigcirc$ disable		
Advanced RF Setting	Source IP : 192.168.0.68		
IP Streaming	Net Mask : 255.255.255.0		
	Default Gateway : 192.168.0.1		
Setup Stream IP			
Setup Stream Port	Save Settings Cancel Changes		
IP Stream Status			

→ Click Safe Settings to save your settings.

#### 3.3.2. Setup Stream Port

For each HDMI source (1 ... 4), set the streaming parameters.

T

- → For Protocol, select whether the output stream is to be output according to RTP or UDP.
- → Select *unicast IP* or *multicast IP* and enter the corresponding IP address.
- → Enter the *receiver port* as well.

RF	Setup Strea	m Port		
Setup RF Output	HDMI 1	Ī	HDMI 2	
Advanced RF Setting	Protocol :	● RTP ○ UDP F	Protocol :	● RTP ○ UDP
IP Streaming	O unicast IP	192.168.0.69	🔿 unicast IP	192.168.0.69
Ŭ	multicast IP	239.255.0.1	multicast IP	239.255.0.1
Setup Stream IP	Receiver Port :	59268 F	Receiver Port :	59270
Setup Stream Port	HDMI 3	ŀ	HDMI 4	
IP Stream Status	Protocol :	● RTP ○ UDP F	Protocol :	● RTP ○ UDP
	$\bigcirc$ unicast IP	192.168.0.69	🔿 unicast IP	192.168.0.69
	multicast IP	239.255.0.1	multicast IP	239.255.0.1
	Receiver Port :	59272 F	Receiver Port :	59274
	Save Settings	Cancel Changes		

→ Click Safe Settings to save your settings.

### 3.3.3. IP Stream Status

T.

Under IP Stream Status, the status of the IP stream is displayed.

RF	IP Stream S	tatus
Setup RF Output	DHCP :	Success
Advanced RF Setting	Source IP :	192.168.0.100
IP Streaming	Net Mask :	255.255.255.0
·	Default Gateway :	192.168.0.1
Setup Stream IP		
Setup Stream Port		
IP Stream Status		

## 3.4. Video



→ In the main menu, click Video.

The settings for Video can be made for each of the four HDMI input ports (1 ... 4).

- → For **RF Output**, select whether to output RF or not (ON/OFF).
- → For IP Output, select whether or not to output an IPTV stream (ON/OFF).

The **Resolution** field indicates the resolution of the connected video source.

Video	Set Video			
Set Video	HDMI 1	(for RF1)	HDMI 2	(for RF1)
	RF Output :	$\odot$ on $\bigcirc$ off	RF Output :	${\ensuremath{}}$ on ${\ensuremath{\bigcirc}}$ off
	IP Output :	○ on ● off	IP Output :	$\bigcirc$ on $\circledast$ off
	Resolution :	1920X1080/50I	Resolution :	1920X1080/50I
	Encoder Rate :	AUTO 🗸	Encoder Rate :	AUTO 🗸
	Actual Rate :	14 Mbps	Actual Rate :	14 Mbps
	HDMI 3	(for RF2)	HDMI 4	(for RF2)
	RF Output :	$\odot$ on $\bigcirc$ off	RF Output :	$\odot$ on $\bigcirc$ off
	IP Output :	○ ON	Output :	○ ON
	Resolution :	1920X1080/50I	Resolution :	1920X1080/50I
	Encoder Rate :	AUTO 🗸	Encoder Rate :	AUTO 🗸
	Actual Rate :	14 Mbps	Actual Rate :	14 Mbps
	Save Settings	Cancel Change	s	

→ For each video source, set the Encoder Rate to Auto or select a value between 4 ... 14 Mbps. If you select Auto, make sure that the output data rate is not exceeded.



The Actuel Rate field indicates the bit rate.

→ Click **Safe Settings** to save your settings.

## 3.5. Audio

						LOG OUT
OUTPUT	VIDEO	AUDIO	STREAM	SYSTEM	<b>RF</b>	
					Part of CARING group	

→ On the main menu, click Audio.

The settings for the audio source can be made for each of the four input ports.

Audio	Set Audio
Set Audio	HDMI 1 Encoder rate : 128 Kbps
	HDMI 2 Encoder rate : 128 Kbps
	HDMI 3 Encoder rate : 128 Kbps
	HDMI 4 Encoder rate : 128 Kbps
	Save Settings Cancel Changes

- → Set the bit rate to 128, 192, 256 or 384 Kbps for each audio source in the Encoder Rate field.
- → Click **Safe Settings** to save your settings.

## **3.6.** Output streams



→ On the main menu, click Stream.

Settings can be made for each of the four output streams.

#### 3.6.1. Service

Stream	Set Service	
Set Service	HDMI 1	HDMI 2
Set LCN	Service ID : 1	Service ID : 17
Set PID	Service Name : HDCH-1	Service Name : HDCH-2
Set NIT	Provider Name : DTV	Provider Name : DTV
Set PDS	Service Type : ADV HD Service 🗸	Service Type : ADV HD Service 🗸
Set TS ID		
	HDMI 3	HDMI 4
	HDMI 3 Service ID : 33	HDMI 4 Service ID : 49
	HDMI 3 Service ID : 33 Service Name : HDCH-3	HDMI 4 Service ID : 49 Service Name : HDCH-4
	HDMI 3 Service ID : 33 Service Name : HDCH-3 Provider Name : DTV	HDMI 4 Service ID : 49 Service Name : HDCH-4 Provider Name : DTV
	HDMI 3         Service ID :       33         Service Name :       HDCH-3         Provider Name :       DTV         Service Type :       ADV HD Service ✓	HDMI 4         Service ID :       49         Service Name :       HDCH-4         Provider Name :       DTV         Service Type :       ADV HD Service ▼

- → In the Service ID field, type an ID between 1 and 65535. The service IDs of all streams in your network must be unique.
- → Enter a maximum 15-character name in the Service name field. These are displayed as program names in the TV set after the programm scan.
- → Enter a maximum 15-character name in the **Provider Name** field.
- → In the Service Type selection field, select for each stream whether it is output in HD, SD, ADV HD or ADV SD.
- → Click Safe Settings to save your settings.



#### 3.6.2. LCN

Stream	Set LCN
Set Service	HDMI 1 LCN : 200
Set LCN	HDMI 2 LCN : 201
Set PID	HDMI 3 LCN : 202
Set NIT	HDMI 4 LCN : 203
Set PDS	
Set TS ID	Save Settings Cancel Changes

→ In the LCN fields, enter a logical channel number between 1 and 1023.
 If the connected TVs support LCN, the respective stream is stored there under the entered program location.

→ Click Safe Settings to save your settings.

#### 3.6.3. PID

Packet identifier changes should only be performed by experienced users.

Stream	Set PID	
Set Service	HDMI 1	HDMI 2
Set LCN	PMT PID : 129	PMT PID : 130
Set PID	PCR PID : 768	PCR PID : 769
Set NIT	Video PID : 2064	Video PID : 2065
Set PDS	Audio PID : 2068	Audio PID : 2069
Set TS ID	HDMI 3	HDMI 4
	PMT PID : 131	PMT PID : 132
	PCR PID : 770	PCR PID : 771
	Video PID : 2066	Video PID : 2067
	Audio PID : 2070	Audio PID : 2071
	Save Settings Cancel Chang	ges

Enter the **PMT PID** (Program Map Table), **PCR PID** (Program Clock Reference), **Video PID** and **Audio PID** in the appropriate fields.

→ Click **Safe Settings** to save your settings.

## 3.6.4. NIT

The NIT setting must only be changed in large networks. Changes should only be carried out by experienced users.

Stream	Set NIT	
Set Service	HDMI 1	HDMI 2
Set LCN	OrgNetwork ID : 8438	OrgNetwork ID : 8438
Set PID	Network ID : 1	Network ID : 1
Set NIT	Network Name : NETWORK	Network Name : NETWORK
Set PDS	Network Ver : 1	Network Ver : 1
Set TS ID	LIDMI 2	
	<u>HDMI 5</u>	
	OrgNetwork ID : 8438	OrgNetwork ID : 8438
	OrgNetwork ID : 8438 Network ID : 1	OrgNetwork ID : 8438 Network ID : 1
	OrgNetwork ID : 8438 Network ID : 1 Network Name : NETWORK	OrgNetwork ID : 8438 Network ID : 1 Network Name : NETWORK
	OrgNetwork ID :       8438         Network ID :       1         Network Name :       NETWORK         Network Ver :       1	Individual       OrgNetwork ID :       8438       Network ID :       1       Network Name :       NETWORK       Network Ver :

- → Enter the OrgNetwork ID, the Network ID, the Network Name and the Network Ver in the appropriate fields.
- → Click **Safe Settings** to save your settings.

#### 3.6.5. PDS

The **PDS** field is used to enter a Private Data Specification. It is a binary 8-bit field, values are allowed from 00000000 to 11111111.

Stream	Set PDS
Set Service	HDMI 1 PDS : 00000029
Set LCN	HDMI 2 PDS : 00000029
Set PID	HDMI 3 PDS : 00000029
Set Network	HDMI 4 PDS : 00000029
Set PDS	
Set TS ID	Save Settings Cancel Changes

- → Enter the PDS for all four output streams.
- → Click **Safe Settings** to save your settings.



## 3.6.6. Transportstream ID

The **TS ID** (Transportstream ID) must be unique for each transportstream. If further transport streams occur in your DVB-C / T network, you may have to assign a different ID here.

Stream	Set TS ID
Set Service	(RF1) HDMI 1 TS ID : 1
Set LCN	HDMI 2 TS ID : 2
Set PID	(RF2) HDMI 3 TS ID : 3
Set NIT	HDMI 4 TS ID : 4
Set PDS	
Set TS ID	Save Settings Cancel Changes

→ Click **Safe Settings** to save your settings.

## 3.7. System

→ On the main menu, click **System**.

In the **System** menu item, the system can be reset, a software update is carried out, the IP address changed, a new password assigned.

#### 3.7.1. Reset

System	System Reset
Reset System	Reset Mode : Please Select ✔
Retrieve Inventory	
Upgrade Code	System Reset
Set IP	
Set Language	
Set Password	
SMARTPortal	

- → In the Reset Mode field, select whether you want to perform a hardware reset or whether you want to reset the HKM 40-02H to its factory settings.
- → Click on System Reset to perform the reset.

## 3.7.2. Retrieve Inventory

Under Retrieve Inventory you will find the current version of the HKM 40-02H.

System	<b>Retrieve Inventory</b>
Reset System	Software Version : 0.11
Retrieve Inventory	Software Date : Sep 19 2023
Upgrade Code	Hardware Version : 1.1
Set IP	Database Version : 0.01
Set Language	
Set Password	
SMARTPortal	

## 3.7.3. Upgrade Software

The software can be updated under Upgrade Software.

Т

- The version of the currently installed software can be found in the menu item "Retrieve Inventory".
- The version of the currently available software can be found on the Internet at <u>https://axing.com/en/downloads/software-and-firmware/</u>
   Software for Encoders

A software upgrade will be downloaded directly from the remote server. This requires an existing internet connection of the HKM 40-02H.

System	Upgrade Software
Reset System	Download From : $<$ Remote Server $\bigcirc$ Local
Retrieve Inventory	Reboot Mode : $<$ Just Reboot $\bigcirc$ Restore to Default
Upgrade Code	Upgrade Software
Set IP	
Set Language	
Set Password	
SMARTPortal	

→ Select Download From **Remote Server**.

#### → Click Upgrade Software.

The HKM 40-02H establishes a connection to the remote server and downloads the software. The download progress is displayed.



After the download the upgrade of the device begins. The remaining time is displayed.

Please wait 51s to Reboot and Config New Firmware

Do not switch off the device during the upgrade!

## 3.7.4. IP Adress

#### **Dynamic IP address**

→ For Enable DHCP, select enable to include the device in a network with a DHCP server. The headend then receives the IP address, netmask and gateway address from the DHCP server in the network.

#### Static IP address

→ For Enable DHCP, select disable to link the device to a network with a fixed IP address. In this case, enter the IP address, the netmask and the gateway address.

System	Set IP
Reset System	Enable DHCP : O enable () disable
Retrieve Inventory	IP Address : 192.168.0.168
Upgrade Code	Net Mask : 255.255.255.0
Set IP	Default Gateway : 192.168.0.1
Set Language	
Set Password	Save Settings Cancel Changes
SMARTPortal	

- → Click Safe Settings to save your settings.
- → After the changes have been saved, the HKM 40-02H is restarted automatically.
- → After restarting, you must enter the new IP address in the browser and log in again.

#### 3.7.5. Language

Here you can select the language of the interface.

System	Set Language
Reset System	Language : English
Retrieve Inventory	
Upgrade Code	Save Settings Cancel Changes
Set IP	
Set Language	
Set Password	
SMARTPortal	

→ Click Safe Settings to save your settings.

## 3.7.6. Password

The factory-set password is: Ramsen8262.

After the first commissioning of the cassette, the factory-set password should be changed immediately.

stem	Set Password
set System	Password :
trieve Inventory	Confirm Password :
grade Code	
IP	Save Settings Cancel Changes
Language	
Password	
MARTPortal	

- → Enter a new password with 8 to 10 characters and / or numbers.
- $\rightarrow$  Re-enter the password.
- → Click **Safe Settings** to save your settings.
- → After the changes have been saved, the Login page is displayed, you must log on again.



## 3.7.7. SMARTPortal

If you are a registered user of the SMARTPortal, then you can remotely control the device via the SMARTPortal and, if necessary, receive support from AXING.

Prerequisite is an internet connection for the device.

System	SMARTPortal
Reset System	State : <ul> <li>enable</li> <li>disable</li> </ul>
Retrieve Inventory	Axing support : ( ) allowed $\bigcirc$ not allowed
Upgrade Code	Email address : anyone@anywhere.com (At most 40 characters) OK
Set IP	Userkey :
Set Language	
Set Password	Device Type : HKM40-20H headend
SMARTPortal	Serial No. : 2496815
	Device Name : HKM 40-02H (At most 16 characters)
	Location : Anywhere (At most 16 characters) OK
	Save Settings Cancel Changes Default

- → At State, select enable.
- → Activate, if required, at **AXING support** the option **allowed**.
- → In the field **Email address**, enter the e-mail address with which you are registered at SMARTPortal.
- → In the field **Userkey**, enter the user key that you received when registering at SMARTPortal.
- → In the field **Device Name**, enter a name of the device. This name will appear later in the SMARTPortal to help you identify the device.
- → In the field Location, enter a name for the location of the device. This name will appear later in the SMARTPortal to help you identify the device.

→ Click on Save Settings.

The data is saved and the connection to the SMARTPortal is established.

# 4. Technical specifications

Туре	НКМ 40-02Н	
Inputs		
Number	$4 \times HDMI$	
Supported protocols	HDMI 1.3, 1.4a	
	HDCP 1.4	
Video resolution	1080p@50 Hz   1080p@60 Hz	
Max. bit rate per channel	14 Mbit/s	
Audio Encoder	MPEG-1 audio layer II	
Video Encoder	H.264 (MPEG-4)	
Output		
Number of channels	1 oder 2 × DVB-C/DVB-T	
Frequency range	110 862 MHz	
Channels selectable	S2 E69	
Connector	1 × F-female	
Test port	1 × F-female (–30 dB)	
Impedance	75 Ω	
Output level adjustable	90 105 dBµV	
Video resolution	1080p@25 Hz   1080p@30 Hz	
Output modulation		
Туре	16QAM, 32QAM, 64QAM, 128QAM, 256QAM @ DVB-C 16QAM, 64QAM @ DVB-T	
MER	≥ 40 dB @ DVB-C ≥ 36 dB @ DVB-T	
Bit rate, max	50.87 Mbps @ DVB-C   31.668 Mbps @ DVB-T	
FFT	2K, 8K mode @ DVB-T	
FEC	1/2, 2/3, 3/4, 5/6, 7/8 @ DVB-T	
Guard interval	1/4, 1/8, 1/16, 1/32	
Symbol rate	2 6.96 MBaud/s	
IP output		
Transportstreams	4 × SPTS	
Total net data rate	56 Mbps	
Supported transport protocols	UDP	
Supported application protocols	RTP	
Interfaces		
Ethernet connectors (LAN)	2 × RJ 45	



Ethernet standards	IEEE 802.3, 100 Base-T
Supported configuration protocols	HTTP, AXING SMARTPortal**
General	
Operating voltage	100 240 VAC/50 60 Hz
Power consumption	25 W
Operating temperature range (acc. to EN 60065)	−10 °C +50 °C
Dimensions (W $\times$ H $\times$ D) appr.	480 × 253 × 47 mm
Weight	2.900 kg
Comments	* with software extension only ** encrypted, cloud-based application for configuration, monitoring and remote maintenance

Hersteller | Manufacturer AXING AG Gewerbehaus Moskau 28262 Ramsen EWR-Kontaktadresse | EEA contact address Bechler GmbH Am Rebberg 44 78239 Rielasingen