


CHP - Compact High Performance Kopfstellen

HKM 40-00 | HKM 40-02

HDMI | DVB-C/T Encoder/Modulator

Betriebsanleitung

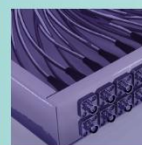

Inhaltsverzeichnis

1. Produktbeschreibung	4
1.1. Allgemeines	4
1.2. Lieferumfang	4
1.3. Eingänge	4
1.4. Ausgang/Modulatoren	4
1.5. Grafische Benutzeroberfläche	5
1.6. Anzeigeelemente und Anschlüsse	5
2. Montage und Anschluss	6
2.1. Wandmontage	6
2.2. Montage im 19"-Rack	7
2.3. Potentialausgleich	7
2.4. HDMI-Anschluss	7
2.5. HF-Ausgang	8
2.6. Spannungsversorgung	8
3. Konfiguration	9
3.1. Anmelden	10
3.2. HF-Einstellungen (RF)	10
3.2.1. DVB-C	10
3.2.2. DVB-T	11
3.2.3. Erweiterte HF-Einstellungen	12
3.3. Video-Quelle	12
3.4. Audio-Quelle	13
3.5. Stream	13
3.5.1. Service Name	13
3.5.2. Service ID	14
3.5.3. LCN	14
3.5.4. PID	15
3.5.5. NIT	15
3.5.6. PDS	15
3.5.7. Transportstream ID	16
3.5.8. Service-Type HD oder SD	16
3.6. System	17
3.6.1. Reset	17
3.6.2. Systemdaten	17
3.6.3. Software-Upgrade	18
3.6.4. IP-Adresse	19
3.6.5. Sprache	19
3.6.6. Passwort	20
3.6.7. Modulator-Typ	20
3.6.8. SMARTPortal	21
4. Technische Daten	22



WARNUNG

- Beachten Sie die dem Gerät beiliegenden Sicherheitshinweise! Diese sind auch unter der folgenden Internetadresse abrufbar: https://download.axing.com/BAs/Sicherheitshinweise_9sprachig.pdf
- Benutzen Sie das Gerät ausschließlich wie in dieser Betriebsanleitung beschrieben und insbesondere nach dem Stand der Technik. Wird das Gerät für andere Einsätze verwendet, wird keine Gewährleistung übernommen!



Hiermit erklärt die AXING AG, dass die gekennzeichneten Produkte den geltenden Richtlinien entsprechen.



WEEE Nr. DE26869279 | Elektrische und elektronische Komponenten nicht mit dem Restmüll, sondern separat entsorgen.

1. Produktbeschreibung

1.1. Allgemeines

- HKM 40-00 = 4 x HDMI in 1 x DVB-C/T
- HKM 40-02 = 4 x HDMI in 2 x DVB-C/T
- Web-basierte Konfiguration | Fernwartung
- Für Wandmontage oder als 19"-Einheit verwendbar
- Eingebautes Netzteil

1.2. Lieferumfang


1 x Encoder/Modulator

1 x Netzkabel

1 x Quickstartanleitung

1.3. Eingänge

Der HKM 40-0x verfügt über vier HDMI-Eingänge. Verbinden Sie diese mit vier HDMI-Quellen.

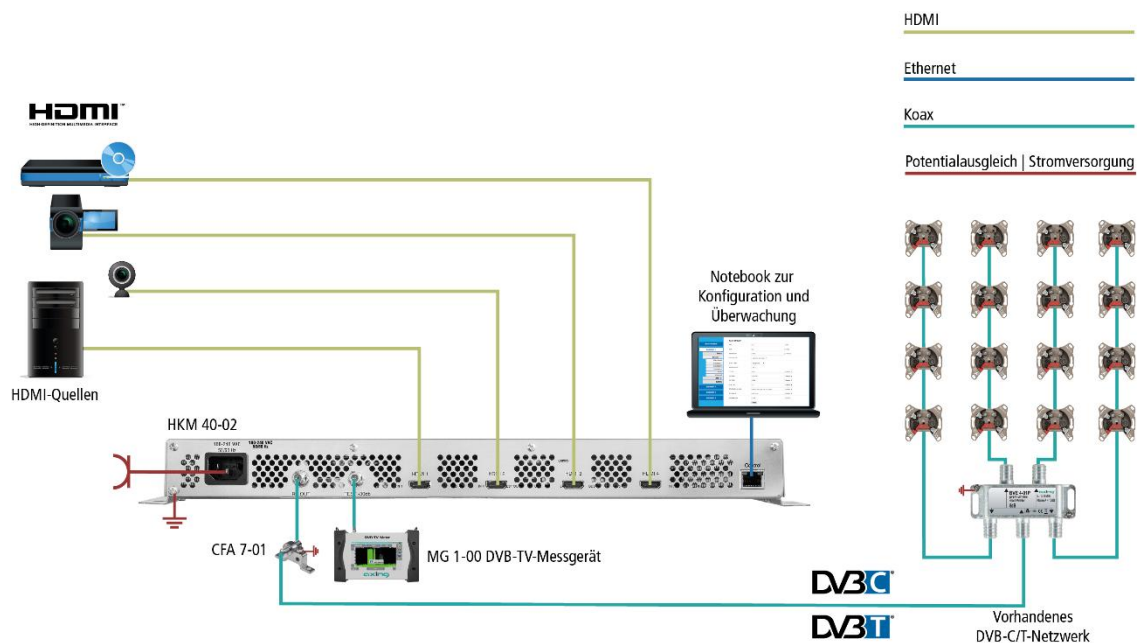


1.4. Ausgang/Modulatoren

Der HKM 40-00 verfügt über vier Modulatoren. Diese werden in **einen Ausgangskanal** gestreamt (DVB-C / DVB-T).


Der HKM 40-02 verfügt über vier Modulatoren. Diese werden in **einen oder zwei Ausgangskanäle** gestreamt (DVB-C / DVB-T).

1.5. Grafische Benutzeroberfläche

Die Einstellungen werden über eine grafische Benutzeroberfläche vorgenommen. Für den Zugriff auf die Benutzeroberfläche benötigen sie einen handelsüblichen PC/Laptop inklusive Netzwerkschnittstelle mit der aktuellen Version des installierten Webbrowsers.

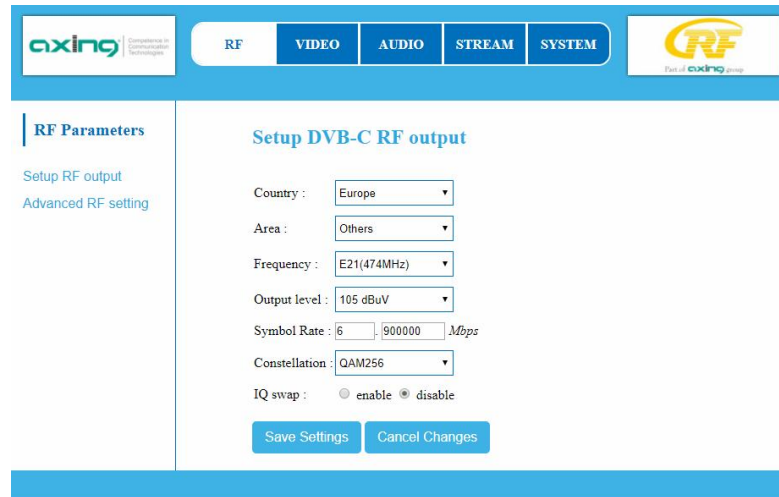

1.6. Anzeigeelemente und Anschlüsse

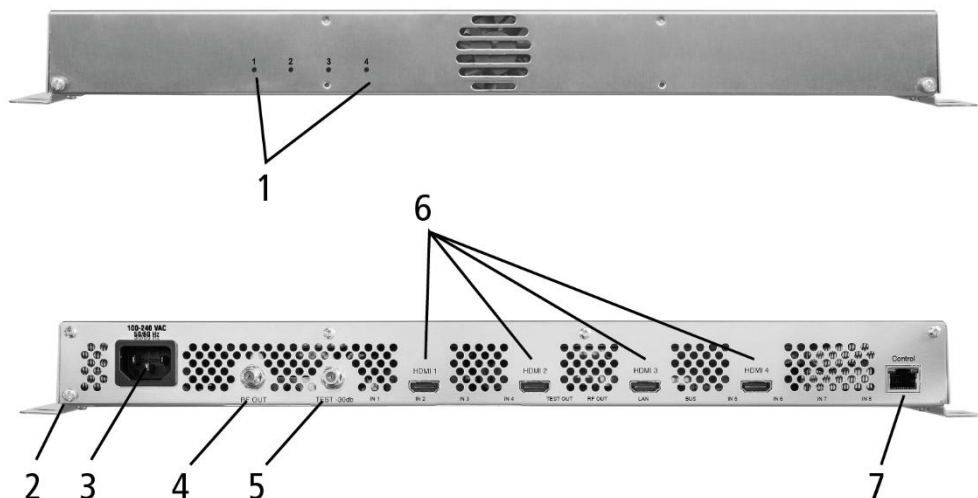

1. LED-Anzeigen HDMI-Eingang 1...4
 - grün = HDMI-Signal ok
 - grün blinkend = Signal mit geringer Auflösung
 - aus = kein HDMI-Signal
2. Potentialausgleichsanschluss
3. Netzanschluss
4. HF-Ausgang
5. Messbuchse
6. HDMI-Eingänge 1...4
7. RJ-45-Ethernet-Anschluss

2. Montage und Anschluss

→ Montage und Anschluss sind nur von autorisierten Elektrofachkräften durchzuführen.


→ Vor Montage und Anschluss Netzstecker ziehen (1)!

Die HKM 40-0x können entweder an der Wand montiert werden oder in einem 19"-Rack eingebaut werden.

2.1. Wandmontage

Der HKM 40-0x ist ab Werk mit Wandhalterungen ausgestattet.

Hinweis: Das Gerät muss bei Wandmontage mit mindestens 5 cm Freiraum entlang aller 4 Seiten montiert werden.

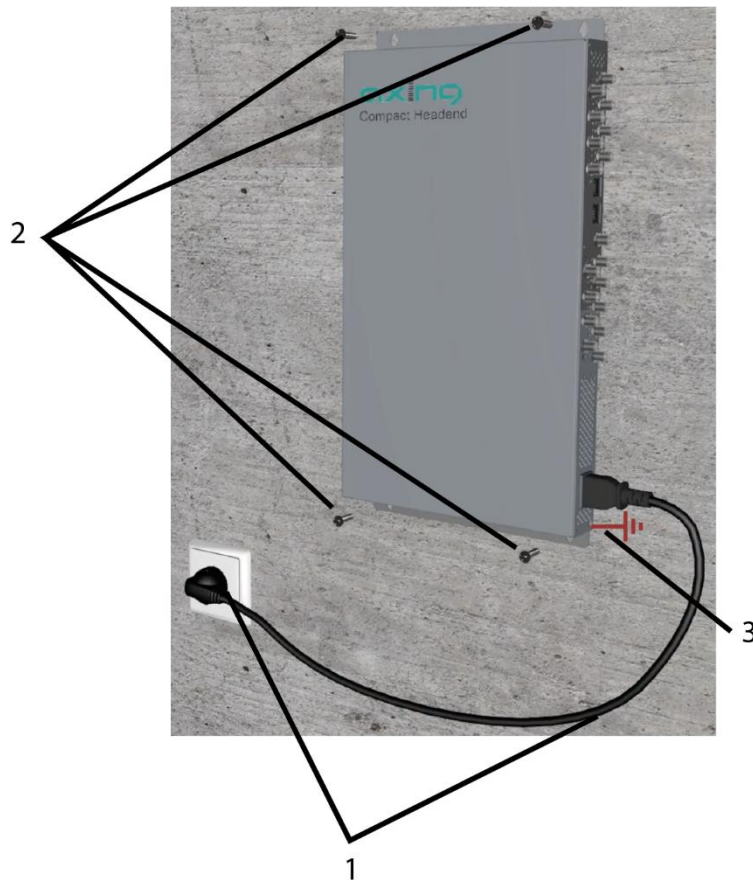


→ HKM 40-0x auf einer senkrechten, ebenen Fläche montieren (Unebenheiten müssen ggf. ausgeglichen werden).

→ Den HKM 40-0x mit mindestens vier 4 × 30 mm Schrauben an der Wand befestigen. (2).

2.2. Montage im 19"-Rack

Hinweis: Bei 19-Zoll-Rack Montage muss mindestens einen Freiraum von 5 cm vor und hinter dem Gerät gegeben sein.

- ➔ Demontieren Sie die Wandhalterung vom Gehäuse des HKM 40-0x.
- ➔ Montieren Sie die Frontplatte HKZ 1-00 am HKM 40-0x (1).

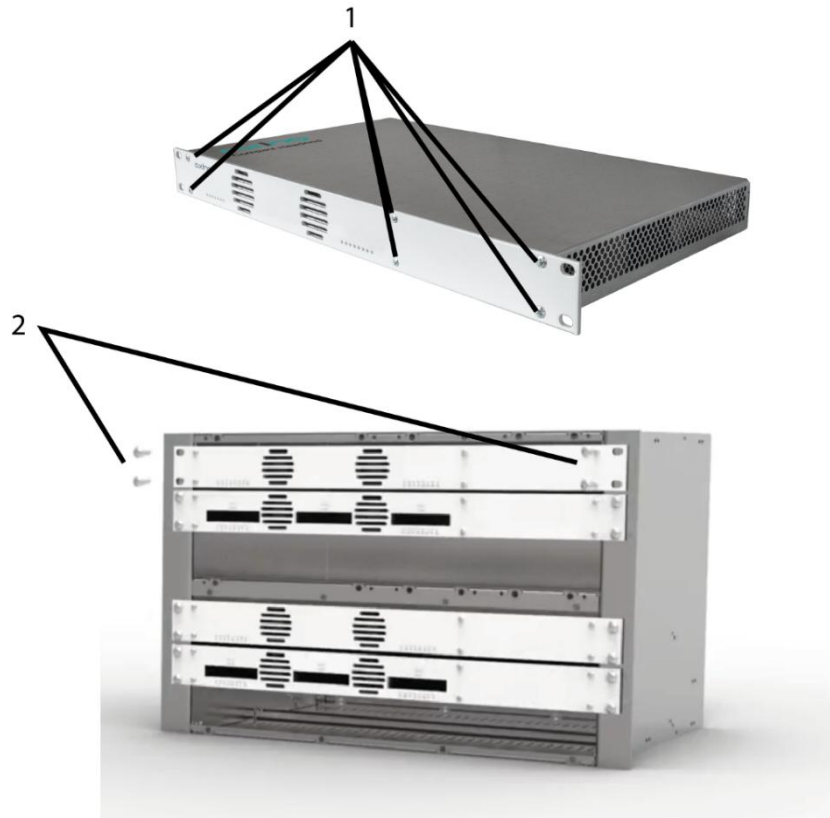

- ➔ Schieben Sie den HKM 40-0x in das 19" Rack.
- ➔ Schrauben Sie den HKM 40-0x mit vier Schrauben fest (2).
- ➔ Halten Sie die EN 60728-11 ein.

2.3. Potentialausgleich

Das Gerät und die Außenleiter der Koaxialkabel müssen am Potentialausgleich angeschlossen werden. Dies dient der Vermeidung gefährlicher Überspannungen (Achtung: Brand-/Lebensgefahr) gemäß EN 60728-11.

- ➔ Verwenden Sie den Potentialausgleichsanschluss am Gerät.
- ➔ Um den Außenleiter der Koaxialkabel am Potentialausgleich anzuschließen, verwenden Sie z. B. QEW Erdungswinkel oder CFA 7-01 Erdungsblöcke am Ausgang.

2.4. HDMI-Anschluss

Der HKM 40-0x verfügt über vier HDMI-Eingänge. Verbinden Sie diese mit vier HDMI-Quellen.

2.5. HF-Ausgang

- Verbinden Sie den Ausgang des HKM 40-0x mit der vorhandenen Verteilung. Verwenden Sie hierfür hochgeschirmte Koaxialkabel mit F- Anschlusssteckern. Passende Kabel und Stecker finden Sie im aktuellen AXING-Katalog oder unter www.axing.com.
- Wenn Sie mehrere HKM 40-0x verwenden, dann müssen die Ausgänge mit geeigneten Weichen verbunden werden.

2.6. Spannungsversorgung



VORSICHT

Das Gerät verfügt über ein eingebautes Netzteil (100...240 VAC/50...60 Hz).

- Schließen Sie das Gerät erst an, nachdem alle Montage und Installationsarbeiten abgeschlossen sind.
- Schließen Sie das Netzkabel an einer entsprechenden Steckdose an.
- Verwenden Sie das mitgelieferte Netzkabel.

3. Konfiguration

Die Konfiguration der Geräte erfolgt über die grafische Benutzeroberfläche der integrierten Webschnittstelle.

Für den Zugriff auf die Benutzeroberfläche benötigen sie einen handelsüblichen PC/Laptop inklusive Netzwerkschnittstelle und die aktuelle Version des installierten Webbrowsers. Für die Anbindung der Netzwerkschnittstelle des Gerätes an den Computer benötigen sie ein handelsübliches Netzwerkabel.

Die Kommunikation erfolgt via HTTP-Protokoll, was eine weltweite Fernwartung der Anlagen über das Internet, an unterschiedlichen Standorten ermöglicht. Der Zugriffsschutz wird mittels Passwortabfrage realisiert.

Ab Werk sind folgende Werte voreingestellt:

- ➔ IP-Adresse: 192.168.0.168
- ➔ Subnetzmaske: 255.255.255.0.

Der Computer und das Gerät müssen sich im gleichen Teilnetz befinden. Der Netzanteil der IP-Adresse des Computers muss auf 192.168.0. und die Subnetzmaske muss auf 255.255.255.0 eingestellt werden.


Der Hostanteil der Netzwerkadresse ist für die Identifikation der Geräte zuständig und kann nur einmal im Teilnetz vergeben werden. Für den Computer können sie eine noch nicht vergebene Host-Adresse zwischen 0 und 255 vergeben.

Tipp

Ändern sie die IP-Adresse und die Subnetzmaske ihres Computers entsprechend (z.B.: IP-Adresse:192.168.0.11 und Subnetzmaske: 255.255.255.0).

Systemsteuerung > Netzwerkverbindungen > LAN Verbindung > Eigenschaften >

Internetprotokoll Version 4 TCP/IPv4 > Eigenschaften > Folgende IP-Adresse verwenden:

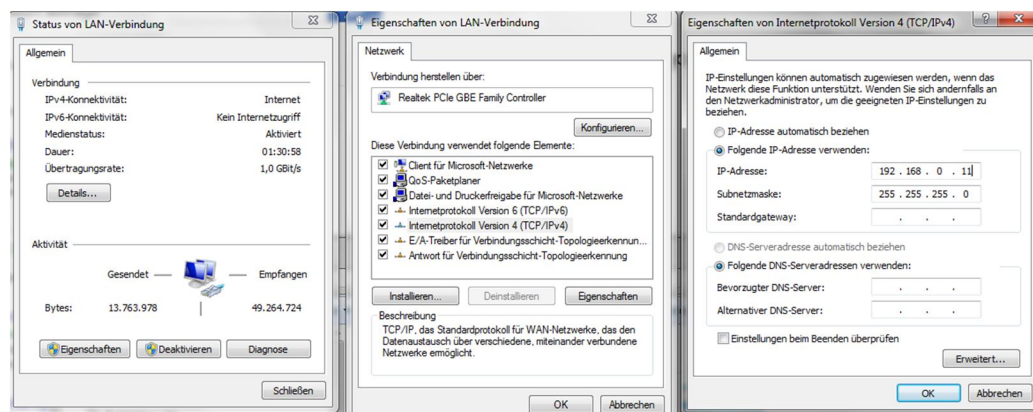

➔Klicken Sie auf OK zum Speichern.

3.1. Anmelden

→ Starten Sie Ihren Webbrowser und geben Sie die IP-Adresse des Geräts ein: 192.168.0.168.

Die Benutzeroberfläche ist gegen unbefugten Zugriff geschützt. Beim Zugriff auf die Benutzeroberfläche erfolgt als erstes die Passwortabfrage.

→ Geben Sie das werkseitig eingestellte Passwort ein: Ramsen8262.

Passwort ändern:

→ Ändern Sie das Passwort sofort nach der ersten Inbetriebnahme und achten Sie auf ein ausreichend sicheres Passwort. Bewahren Sie dieses Passwort an einem sicheren Ort auf.

→ Menüpunkt: **System** > **Set Password** (siehe 3.6.6 auf Seite 20).

Hinweise:

- Wird der Browser ohne vorherige Abmeldung geschlossen, erfolgt nach ca. 2,5 Minuten eine automatische Abmeldung.
- Bleibt das Browserfenster geöffnet, erfolgt keine automatische Abmeldung. Dadurch wird die Überwachung der Anlage über den Webbrowser ermöglicht.

3.2. HF-Einstellungen (RF)

→ Klicken Sie im Hauptmenü auf **RF**.

Beim **HKM 40-0x** werden je nach eingestelltem Modulator die **RF Parameters** für DVB-C oder DVC-T angezeigt (wie Sie den Modulator-Typen wählen, wird unter 3.6.7 Modulator-Typ auf Seite 20 beschrieben).

3.2.1. DVB-C

→ Treffen Sie eine Vorauswahl mit den in den Menüs **Country** und **Area**.

Je nach getroffener Auswahl werden im Auswahlfeld **Frequenz** die landestypischen Kanäle angezeigt.

→ Wählen Sie im Auswahlfeld **Output level** einen Ausgangspegel von 85...105 dBμV aus.

→ Im Feld **Symbol Rate** kann die Symbolrate zwischen 1000 und 7500 frei eingestellt werden. Der Standardwert ist 6900. Manche Netze arbeiten auch mit 6875. Wird mit nur 7MHz Bandbreite gearbeitet, dann ist eine Symbolrate von 6111 gebräuchlich.


→ Wählen Sie im Auswahlfeld **Constellation** die gewünschte Ausgangsmodulation aus (QAM 16/32/64/128/256).

QAM256 ermöglicht die höchste Datenübertragungsrate, erfordert aber auch die beste Netzqualität.

→ Die Option **IQ swap** aktiviert oder deaktiviert die inverse Phasendrehung des IQ-Signals durch Austauschen der I- und Q-Eingänge.

→ Klicken Sie auf **Safe Settings**, um Ihre Einstellungen zu speichern.

3.2.2. DVB-T

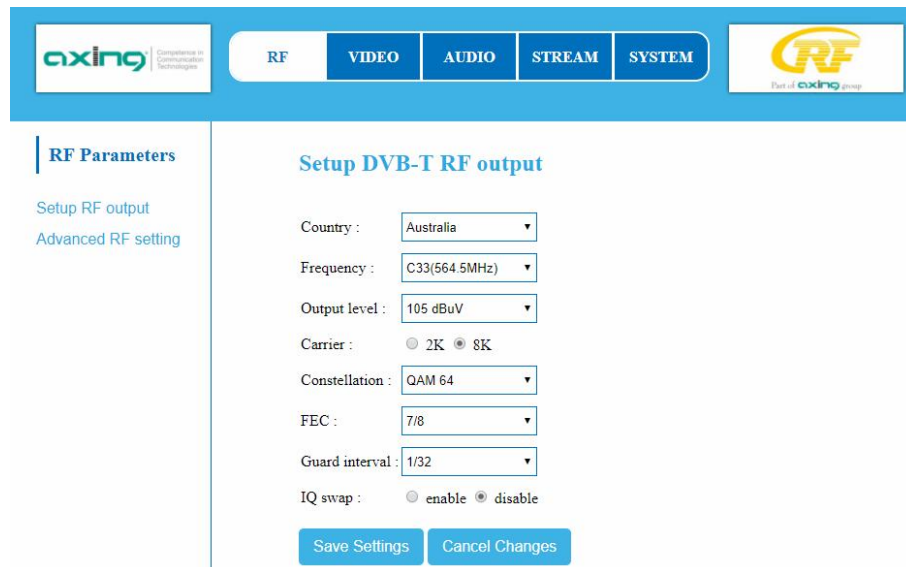

→ Treffen Sie eine Vorauswahl mit den in den Menüs **Country** und **Area**.

Je nach getroffener Auswahl werden im Auswahlfeld **Frequenz** die landestypischen Kanäle angezeigt.

→ Wenn Sie im Auswahlfeld **Country** die Option **Others** auswählen, dann können Sie die Frequenzen frei einstellen.

Setup DVB-T RF output



→ Wählen Sie im Auswahlfeld **Output level** einen Ausgangspegel von 85...105 dBμV aus.

→ Wählen Sie im Auswahlfeld **Constellation** die gewünschte Ausgangsmodulation aus (QAM 16/64).

QAM64 ermöglicht die höchste Datenübertragungsrate, erfordert aber auch die beste Netzqualität.

→ Wählen Sie im Auswahlfeld **FEC** den FEC-Faktor aus (1/2, 2/3, 3/4, 5/6 7/8)

Durch Änderung des FEC-Faktors wird der Anteil der FEC-Daten im Verhältnis zu den Nutzdaten geändert. (FEC 1/2 = geringe Datenrate aber starker Fehlerschutz, FEC 7/8 – hohe Datenrate aber geringer Fehlerschutz).

→ Wählen Sie im Feld **Guard Intervall** das Schutzintervall aus 1/32, 1/16, 1/8, 1/4. Durch dieses Schutzintervall wird bei der DVB-T Übertragung das Symbolübersprechen vermieden. Das Guard-Intervall drückt das Verhältnis der Übertragungspausen zur Nutzdatenübertragungszeit aus. Ein sehr langes Schutzintervall (z. Bsp. 1/4) führt daher zu einer sehr geringen Datenrate. Bei der Übertragung in einem einwandfreien Koaxialen Verteilnetz reicht ein sehr kleines Schutzintervall aus (1/32).

→ Die Option **IQ swap** aktiviert oder deaktiviert die inverse Phasendrehung des IQ-Signals durch Austauschen der I- und Q-Eingänge.

→ Klicken Sie auf **Safe Settings**, um Ihre Einstellungen zu speichern.

3.2.3. Erweiterte HF-Einstellungen

- ➔ Nehmen Sie ggf. im Feld **Frequenz offset** den Feinabgleich des Ausgangskanal in 10 KHz-Schritten vor.
- ➔ Mit der Option **Output disable** können Sie das Ausgangssignal grundsätzlich abschalten.
- ➔ Mit der Option **Single Tone** stellen Sie ein, ob z.B. bei fehlerhaftem oder fehlendem Eingangssignal ein einzelner Träger als Ausgangssignal ausgegeben werden soll.
- ➔ Klicken Sie auf **Safe Settings**, um Ihre Einstellungen zu speichern.

3.3. Video-Quelle

- ➔ Klicken Sie im Hauptmenü auf **Video**.

Die Einstellungen für die Video-Quelle können für jeden der vier Eingangs-Ports vorgenommen werden.

- ➔ Wählen Sie im Auswahlfeld **Port** die Video-Quelle **1** bis **4**.
- ➔ Stellen Sie für jede Video-Quelle das **Output Coding** ein (H.264 oder MPEG2)
- ➔ Stellen Sie für jede Video-Quelle die **Encoder Rate** auf **Auto** oder wählen Sie einen Wert zwischen **4...14 Mbps**.

Wenn Sie **Auto** wählen, dann achten Sie darauf, dass die Ausgangsdatenrate nicht überschritten wird.


Die Felder **Output Resolution** und **Current Rate** zeigen die Auflösung und die Bitrate der angeschlossenen Video-Quelle an.

- ➔ Klicken Sie auf **Safe Settings**, um Ihre Einstellungen zu speichern.

3.4. Audio-Quelle

→ Klicken Sie im Hauptmenü auf **Audio**.

Die Einstellungen für die Audio-Quelle können für jeden der vier Eingangs-Ports vorgenommen werden.

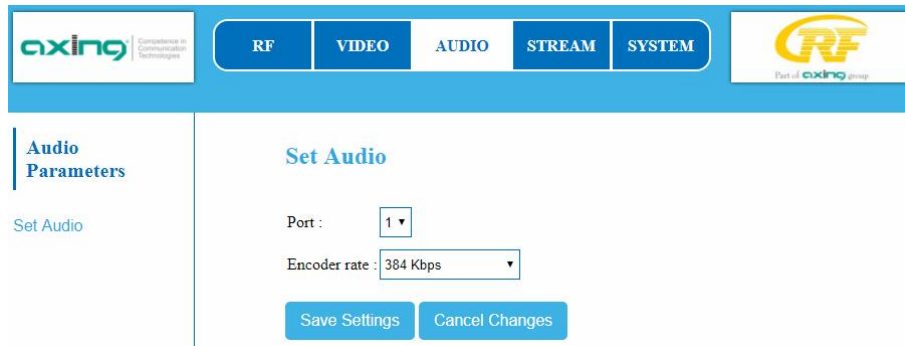

→ Wählen Sie im Auswahlfeld **Port** die Audio-Quelle **1** bis **4**.

→ Stellen Sie für jede Audio-Quelle im Feld **Encoder Rate** die Bitrate auf **128**, **256** oder **384 Kbps**.

→ Klicken Sie auf **Safe Settings**, um Ihre Einstellungen zu speichern.

3.5. Stream

→ Klicken Sie im Hauptmenü auf **Stream**.

Für jeden der vier Ausgangs-Streams können Einstellungen vorgenommen werden.

3.5.1. Service Name

Hier werden die Name der vier Ausgangsstreams festgelegt. Diese werden im TV-Gerät nach dem Suchlauf als Programmnamen angezeigt.



→ Wählen Sie im Auswahlfeld **Port** die Option **1** bis **4**.

→ Geben Sie im Feld **Service name** einen maximal 15stelligen Programmnamen ein.

→ Klicken Sie auf **Safe Settings**, um Ihre Einstellungen zu speichern.

3.5.2. Service ID


- ➔ Wählen Sie im Auswahlfeld **Port** die Option **1** bis **4**.
- ➔ Geben Sie im Feld **Service ID** eine ID zwischen 1 und 65535 ein.
Die Service IDs aller Streams im Netzwerk müssen eindeutig sein.
- ➔ Klicken Sie auf **Safe Settings**, um Ihre Einstellungen zu speichern.

3.5.3. LCN

- ➔ Wählen Sie im Auswahlfeld **Port** die Option **1** bis **4**.
- ➔ Geben Sie im Feld **LCN** eine Logical Channel Number zwischen 1 und 1023 ein.
Wenn die angeschlossenen TV-Geräte LCN unterstützen, dann wird der jeweilige Stream unter dem eingegebenen Programmplatz abgelegt.
- ➔ Klicken Sie auf **Safe Settings**, um Ihre Einstellungen zu speichern.

3.5.4. PID

Änderungen der **Packet Identifier** sollten nur von erfahrenen Nutzern durchgeführt werden.

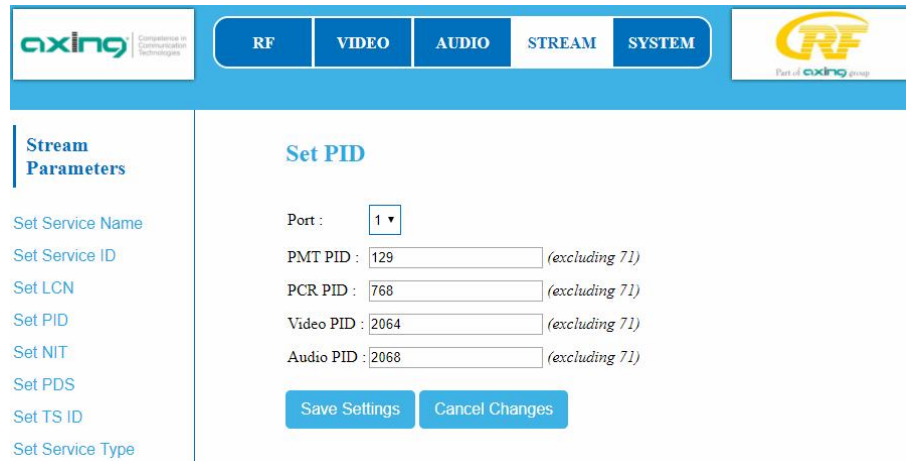


➔ Wählen Sie im Auswahlfeld **Port** die Option **1** bis **4**.

➔ Geben Sie die **PID** für **PMT** (Program Map Table), **PCR** (Program Clock Reference), **Video** und **Audio** in die entsprechenden Felder ein.

➔ Klicken Sie auf **Safe Settings**, um Ihre Einstellungen zu speichern.

3.5.5. NIT


In die NIT-Einstellung muss nur in großen Netzen eingegriffen werden. Änderungen sollten nur von erfahrenen Nutzern durchgeführt werden.

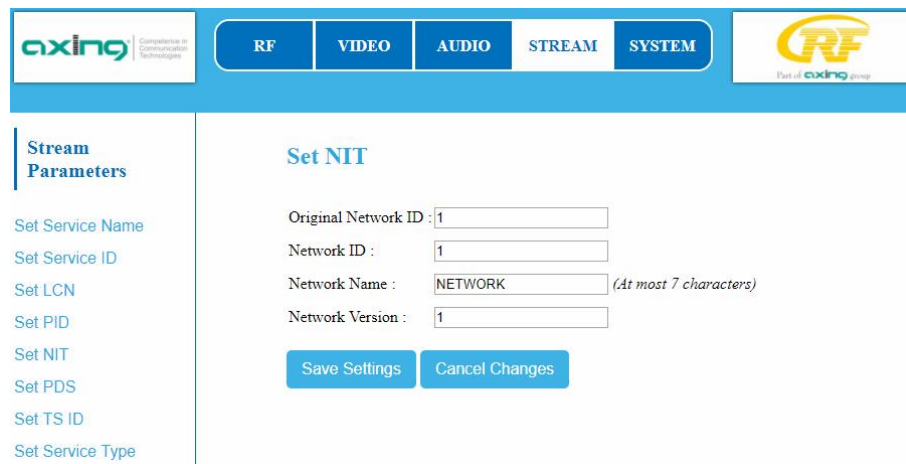

➔ Klicken Sie auf **Safe Settings**, um Ihre Einstellungen zu speichern.

3.5.6. PDS

Das Feld **PDS** dient zur Eingabe einer Private Data Specification. Es ist ein binäres 8-Bit-Feld, zulässig sind Werte von 00000000 bis 11111111.

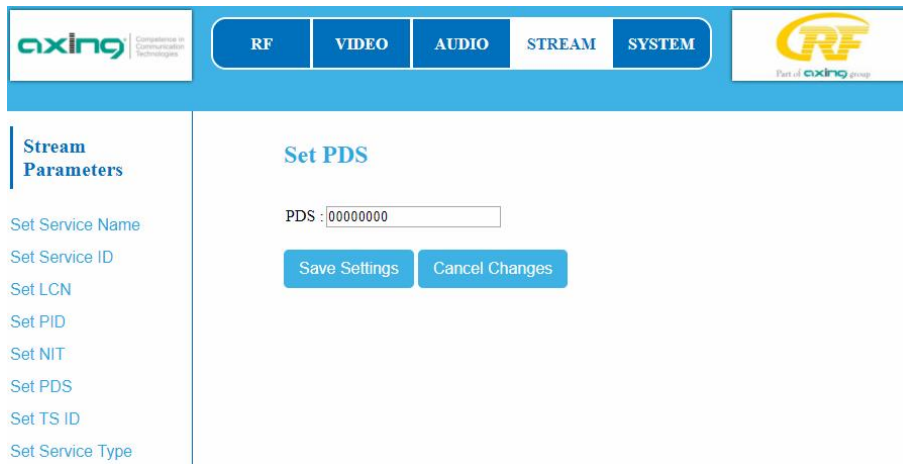

The screenshot shows the 'axing' logo and 'Competence in Communication Technologies' on the left. The top navigation bar includes 'RF', 'VIDEO', 'AUDIO', 'STREAM', and 'SYSTEM'. The 'STREAM' tab is selected. On the left sidebar, 'Stream Parameters' is highlighted, with a list of options: 'Set Service Name', 'Set Service ID', 'Set LCN', 'Set PID', 'Set NIT', 'Set PDS', 'Set TS ID', and 'Set Service Type'. The main content area is titled 'Set PDS' and features a text input field for 'PDS' containing '00000000'. Below the input field are two buttons: 'Save Settings' and 'Cancel Changes'.

3.5.7. Transportstream ID


Die **TS ID** (Transportstream ID) muss für jeden Transportstream eindeutig sein. Wenn weitere Transportstreams in Ihrem DVB-C/T-Netz vorkommen, müssen Sie ggf. hier eine andere ID vergeben.



The screenshot shows the same interface as the previous one, but the 'Set TS ID' page is active. The 'Set TS ID' option is highlighted in the sidebar. The main content area is titled 'Set TS ID' and features a text input field for 'TS ID' containing '1'. Below the input field are two buttons: 'Save Settings' and 'Cancel Changes'.

→ Klicken Sie auf **Save Settings**, um Ihre Einstellungen zu speichern.

3.5.8. Service-Type HD oder SD

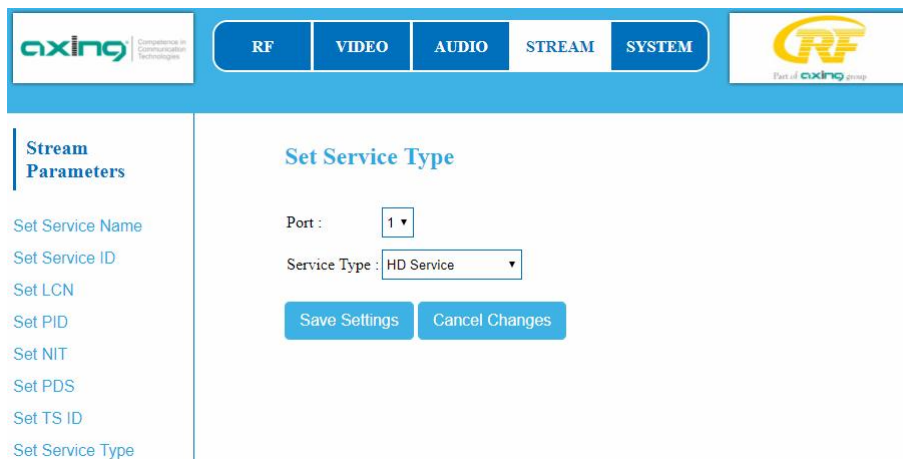

The screenshot shows the same interface, but the 'Set Service Type' page is active. The 'Set Service Type' option is highlighted in the sidebar. The main content area is titled 'Set Service Type' and features two dropdown menus: 'Port' (set to '1') and 'Service Type' (set to 'HD Service'). Below the dropdowns are two buttons: 'Save Settings' and 'Cancel Changes'.

→ Wählen Sie im Auswahlfeld **Port** die Option **1** bis **4**.

→ Wählen Sie im Auswahlfeld **Service Type** für jeden Stream aus ob er in **HD** oder **SD** ausgegeben wird.


→ Klicken Sie auf **Safe Settings**, um Ihre Einstellungen zu speichern.

3.6. System

→ Klicken Sie im Hauptmenü auf **System**.

In dem Menüpunkt **System** kann das System zurückgesetzt werden, ein Softwareupdate durchgeführt, die IP-Adresse geändert, ein neues Passwort vergeben.

3.6.1. Reset

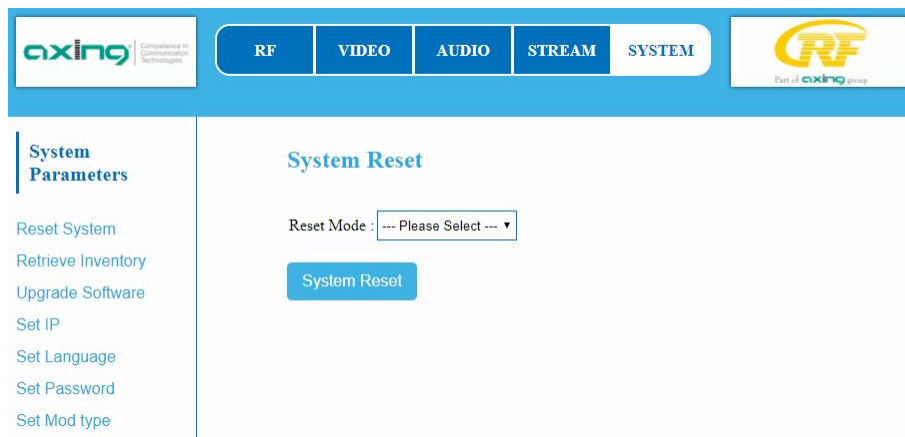


→ Wählen Sie im Feld **Reset Mode**, ob Sie einen Hardware-Reset oder einen Software-Reset durchführen möchten, oder ob Sie den HKM 40-0x auf seine Werkseinstellungen zurücksetzen wollen.

→ Klicken Sie auf **System Reset**, um den Reset durchzuführen.

3.6.2. Systemdaten

Unter **Retrieve Inventory** finden Sie die aktuellen Versionstände des HKM 40-0x.

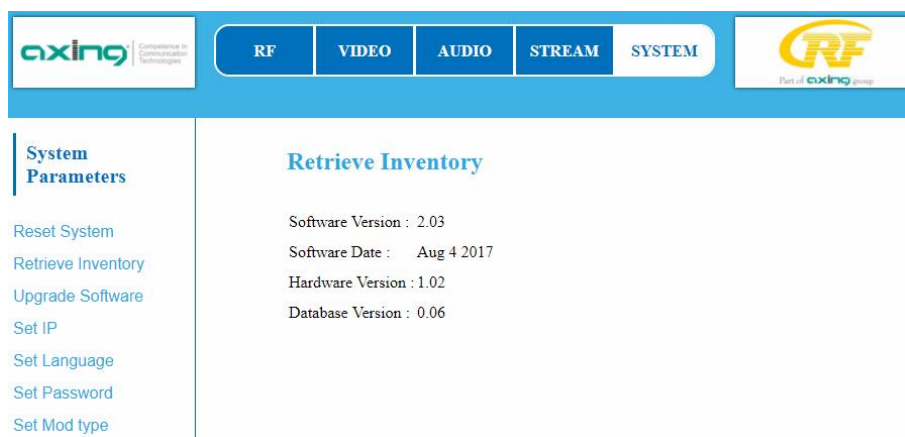

3.6.3. Software-Upgrade


Unter **Upgrade Software** kann die Software aktualisiert werden.

- Den Versionsstand der derzeit installierten Software finden Sie im Menüpunkt „Retrieve Inventory“.
- Den Versionsstand der aktuell verfügbaren Software finden Sie im Internet:

<https://axing.com/downloads/software-und-firmware/>

➤ Software für Encoder

Die Software wird direkt vom Remote-Server heruntergeladen. Dies setzt eine bestehende Verbindung des HKM 40-0x zum Internet voraus.

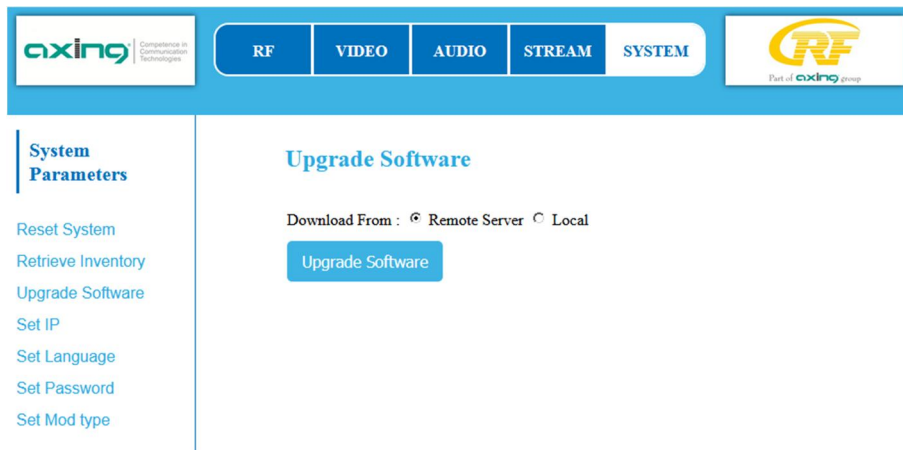


➔ Wählen Sie Download From **Remote Server**.

➔ Klicken Sie auf **Upgrade Software**.

Der HKM stellt eine Verbindung zum Remoteserver her und lädt die Software herunter.

 Der Download-Fortschritt wird angezeigt.



Anschließend beginnt das Upgrade des Geräts. Die verbleibende Zeit wird angezeigt.



Schalten Sie das Gerät während des Upgrades auf keinen Fall aus!

3.6.4. IP-Adresse

Dynamische IP-Adresse

➔ Wählen Sie bei **Enable DHCP** die Option **enable**, um das Gerät in ein Netzwerk mit DHCP-Server einzubinden.

Statische IP-Adresse

➔ Wählen Sie bei **Enable DHCP** die Option **disable**, um das Gerät mit einer fest vergebenen IP-Adresse in ein Netzwerk einzubinden. Hier kann die IP-Adresse, Netzmaske und das Gateway geändert werden.

➔ Klicken Sie auf **Safe Settings**, um Ihre Einstellungen zu speichern.

Nach dem die Änderungen gespeichert wurden, wird der HKM 40-0x automatisch neu gestartet.

➔ Nach dem Neustart müssen Sie die neue IP-Adresse im Browser eingeben und sich erneut anmelden.

3.6.5. Sprache

Hier können Sie die Sprache der Oberfläche auswählen.

➔ Klicken Sie auf **Safe Settings**, um Ihre Einstellungen zu speichern.

3.6.6. Passwort

Das werkseitig eingestellte Passwort lautet: *Ramsen8262*.

Nach der ersten Inbetriebnahme der Kassette sollte das werkseitig eingestellte Passwort sofort geändert werden.

→ Geben Sie ein neues Passwortes mit 8 bis 10 Buchstaben und/oder Zahlen ein.

→ Geben Sie das Passwort erneut ein.

→ Klicken Sie auf **Safe Settings**, um Ihre Einstellungen zu speichern.

Nach dem die Änderungen gespeichert wurden, wird die Startseite eingeblendet, Sie müssen sich neu anmelden.

3.6.7. Modulator-Typ

Abhängig vom konfigurierten Modulationsverfahren werden die Ausgangssignale in DVB-C oder DVB-T moduliert.

→ Wählen Sie im Feld **Type** ein **Modulationsverfahren** aus.

→ Klicken Sie auf **Safe Settings**, um Ihre Einstellungen zu speichern.


→ Das Modulationsverfahren wird geändert. Die verbleibende Zeit wird angezeigt.

Please wait 51s to Reboot and Config
New Firmware

3.6.8. SMARTPortal

Wenn Sie registrierter Nutzer des SMARTPortals sind, dann können Sie den Encoder über das SMARTPortal fernwarten und ggf. Support von AXING erhalten.

Vorraussetzung ist eine Internetverbindung des Encoders.

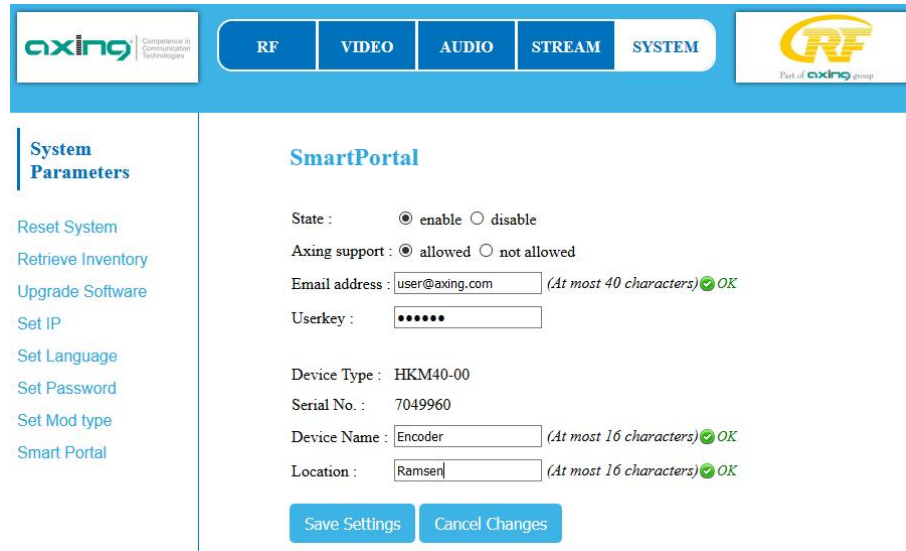


- ➔ Wählen Sie bei **State** die Option **enable**.
- ➔ Aktivieren Sie bei **AXING Support**, wenn gewünscht, die Option **allowed**.
- ➔ Geben Sie im Feld **Email address** die E-Mail-Adresse ein, mit der Sie sich im SMARTPortal registriert haben.
- ➔ Geben Sie im Feld **Userkey** den Benutzercode ein, den Sie bei der Registrierung am SMARTPortal erhalten haben.
- ➔ Geben Sie im Feld **Device Name** eine Bezeichnung für das Gerät ein. Diese Bezeichnung erscheint später im SMARTPortal und hilft Ihnen dabei das Gerät zu identifizieren.
- ➔ Geben Sie im Feld **Standort** eine Bezeichnung des Standorts für das Gerät ein. Diese Bezeichnung erscheint später im SMARTPortal und hilft Ihnen dabei das Gerät zu identifizieren.

Klicken Sie auf **Save Settings**. Die Daten werden gespeichert und die Verbindung zum SMARTPortal wird hergestellt.

4. Technische Daten

Bst-Nr.	HKM04000	HKM04002
Anzahl der Eingänge	4 × HDMI	
Unterstützte HDCP-Version	HDCP 1.x	
Eingangs-Video-Auflösung	1080p@50 Hz 1080p@60 Hz	
Max. Bitrate pro Kanal	16 Mbit/s	
Audio-Encoder	MPEG-1 audio layer II	
Video-Encoder	H.264 (MPEG-4)	
Anzahl der Ausgangskanäle	1 × DVB-C/DVB-T	2 × DVB-C/DVB-T
Ausgangsfrequenzbereich	45.....862 MHz	
Ausgangskanäle einstellbar	E2.....E69	
Ausgangs-Anschluss	1 × F-Buchse	
Ausgangs-Messbuchse	1 × F (–30 dB)	
Ausgangs impedanz	75 Ω	
Ausgangspegel einstellbar	90...105 dBμV @ 1 channel	90...105 dBμV @ 1 channel 87...102 dBμV @ 2 channels
Ausgangsmodulation, Modulationsart	16QAM, 32QAM, 64QAM, 128QAM, 256-QAM @ DVB-C 16QAM, 64QAM @ DVB-T	
Ausgangs-Video-Auflösung	1080p@25 Hz 1080p@30 Hz	
MER	≥ 40 dB @ DVB-C ≥ 36 dB @ DVB-T	
Ausgangs-Symbolrate	1...7,5 MBauds/s	
FEC	1/2, 2/3, 3/4, 5/6, 7/8 @ DVB-T	
FFT	2k, 8k mode @ DVB-T	
Ausgangs-Schutzintervall	1/4, 1/8, 1/16, 1/32	
Ausgangs-Bitrate, max.	50,87 Mbps @ DVB-C 31,668 Mbps @ DVB-T	
Konfigurations-Schnittstelle	1 × RJ-45, IEEE 802.3, 100 Base-T	
Betriebsspannung	100...240 VAC/50...60 Hz	
Leistungsaufnahme	50 W	
Betriebstemperaturbereich (gemäß EN 60065)	-10°C...+50°C	
Maße (B × H × T) ca.	480 × 253 × 47 mm	

Hersteller | Manufacturer
AXING AG
Gewerbehaus Moskau
 8262 Ramsen


EWR-Kontaktadresse | EEA contact address
Bechler GmbH
Am Rebberg 44
 78239 Rielasingen

CHP - Compact High Performance Headends

HKM 40-0x | HKM 40-02

HDMI | DVB-C/T encoder/modulator

Operation instructions

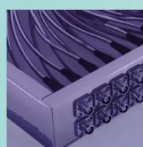

KLASSE

A
CLASS

HD
TV

Table of contents

1.	Product description	4
1.1.	General.....	4
1.2.	Scope of delivery.....	4
1.3.	Inputs.....	4
1.4.	Output/modulators	4
1.5.	Graphical user interface	5
1.6.	Display elements and connectors.....	5
2.	Mounting and Installation.....	6
2.1.	Wall mounting	6
2.2.	Mounting in a 19" rack	7
2.3.	HDMI installation.....	7
2.4.	RF Output	7
2.5.	Equipotential bonding	7
2.6.	Power supply	8
3.	Configuration	9
3.1.	Login.....	9
3.2.	RF settings	10
3.2.1.	DVB-C.....	10
3.2.2.	DVB-T	11
3.2.3.	Advanced RF settings	12
3.3.	Video Source.....	12
3.4.	Audio Source	13
3.5.	Stream	13
3.5.1.	Service Name.....	13
3.5.2.	Service ID.....	14
3.5.3.	LCN.....	14
3.5.4.	PID.....	15
3.5.5.	NIT.....	15
3.5.6.	PDS.....	16
3.5.7.	Transportstream ID	16
3.5.8.	Service Type HD or SD	17
3.6.	System	17
3.6.1.	Reset	17
3.6.2.	Retrieve Inventory	18
3.6.3.	Upgrade Software	19
3.6.4.	IP Adress	19
3.6.5.	Language.....	20
3.6.6.	Password.....	21
3.6.7.	Modulator Type	21
3.6.8.	SMARTPortal	22
4.	Technical specifications.....	23



WARNING

- Observe the safety instructions supplied with the device! They are also available at the following Internet address: https://download.axing.com/BAs/Sicherheitshinweise_9sprachig.pdf
- Use the device only as described in these operating instructions and in particular in accordance with the state of the art. If the device is used for other purposes, no warranty will be assumed!



Herewith AXING AG declares that the marked products comply with the valid guidelines.



WEEE Nr. DE26869279 | Electrical and electronic components must not be disposed of as residual waste, it must be disposed of separately.

1. Product description

1.1. General


- HKM 40-0x = 4 x HDMI in 1 x DVB-C/T
- HKM 40-02 = 4 x HDMI in 2 x DVB-C/T
- Web-based configuration | Remote maintenance
- Can be used for wall mounting or as a 19" unit
- Built-in power supply

1.2. Scope of delivery

- 1 x Encoder/Modulator
- 1 x AC power cord
- 1 x Quick start guide

1.3. Inputs

The HKM 40-0x has four HDMI inputs. Connect them to four HDMI sources.

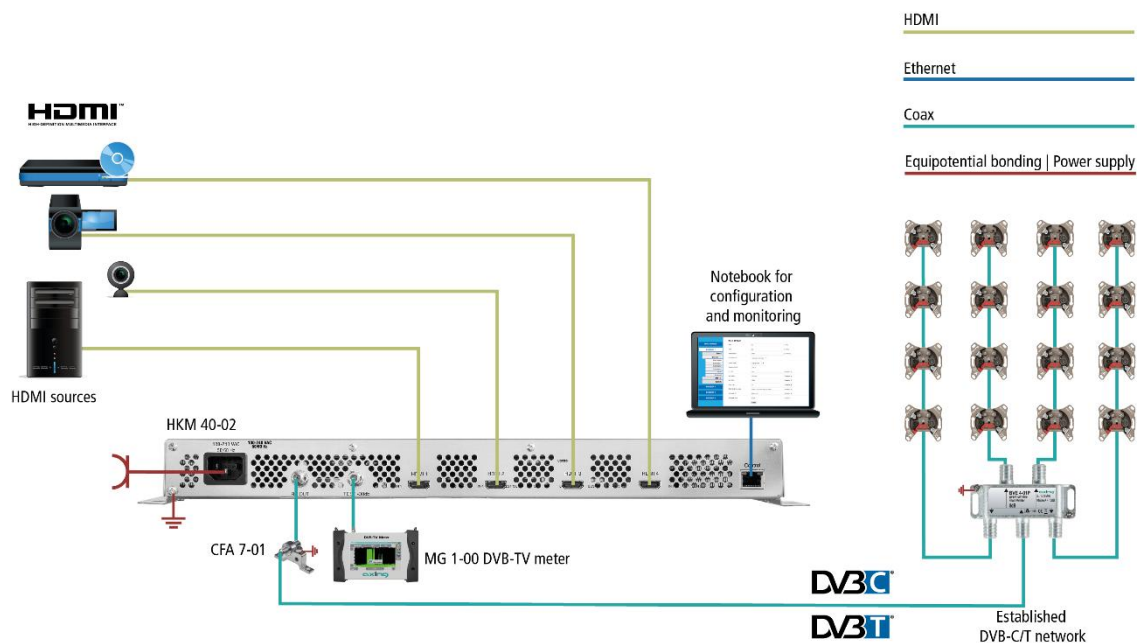


1.4. Output/modulators

The HKM 40-0x has four output modulators. These will be streamed into **one output channel** (DVB-C / DVB-T).


The HKM 40-02 has four output modulators. These will be streamed into **one or two output channels** (DVB-C / DVB-T).

1.5. Graphical user interface

The settings can be changed via the graphical user interface. To access the user interface and thus configure the devices, you need a standard PC/laptop with a network interface and the actual version of the installed web browser.

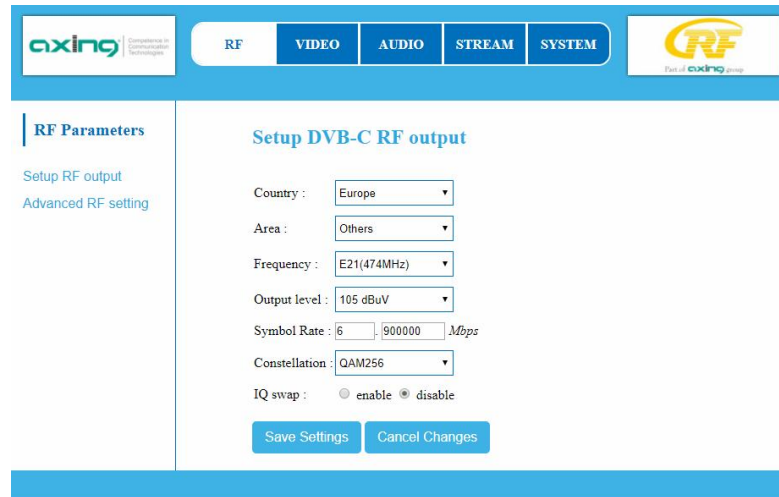

1.6. Display elements and connectors

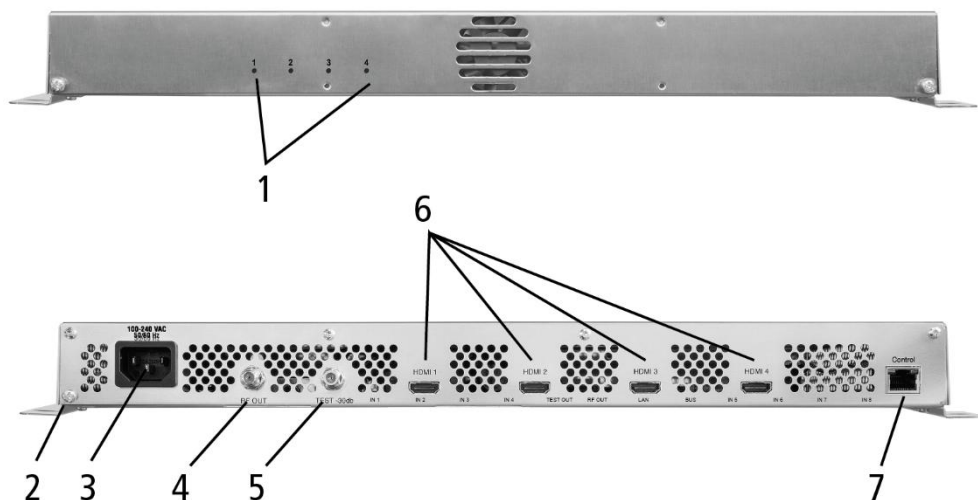

1. LED indicators HDMI input 1...4
 - green = HDMI signal ok
 - green flashing = low resolution signal
 - out = no HDMI signal
2. Equipotential bonding connection
3. Mains connection
4. RF output
5. Test port
6. HDMI inputs
7. RJ45 Ethernet connector

2. Mounting and Installation

➔ Installation must be performed by authorized and skilled electricians only.


➔ Before mounting and installation, pull the mains plug (1)!

The HKM 40-0x can be mounted on either at the wall or be mounted in a 19" rack.

2.1. Wall mounting

The HKM 40-0x are factory-fitted with wall brackets.

Note: The unit must be wall mounted with at least 5 cm clearance along the 4 sides.

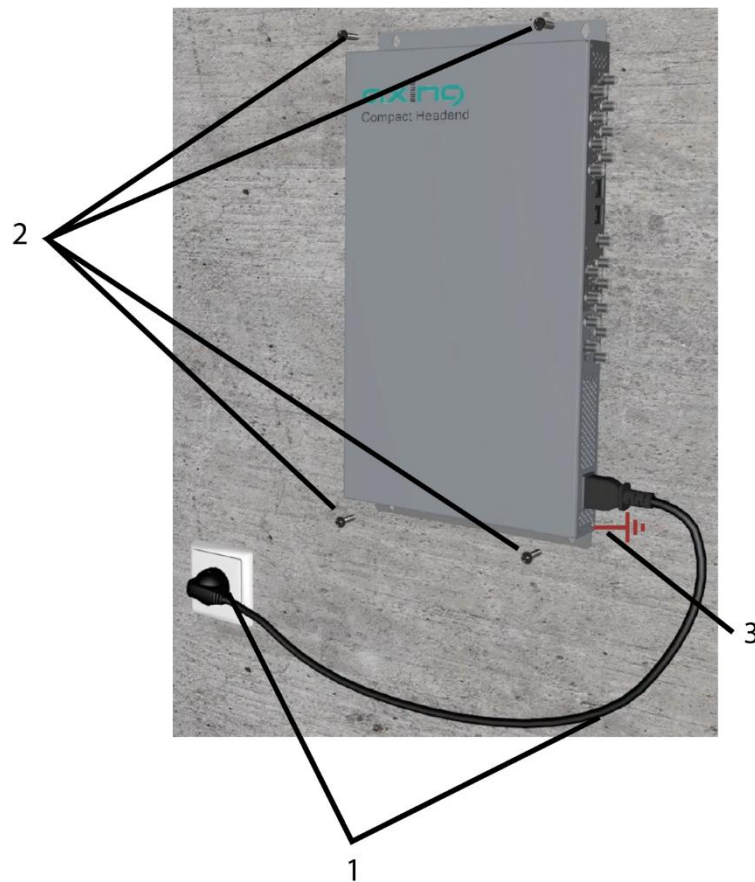

➔ The installation must be carried out on an even and vertical surface (any unevenness must be compensated).

➔ Fix the HKM 40-0x with with minimum four pcs of 4 × 30 mm screws.

➔ The HKM 40-0x must be connected to the equipotential bonding according to EN 60728-11. Use the equipotential bonding connection attached to the device (3).

2.2. Mounting in a 19" rack

Note: For 19-inch rack mounting, there must be at least 5 cm clearance in front of and behind the unit.

- ➔ Remove the wall bracket from the housing of the HKM 40-0x.
- ➔ Mount the front plate HKZ 1-00 onto the HKM 40-0x (1).



- ➔ Slide the HKM 40-0x into the 19 "rack.
- ➔ Fix the HKM 40-0x with four screws (2).
- ➔ Maintain the EN 60728-11.

2.3. HDMI installation

The HKM 40-0x has four HDMI inputs. Connect them to four HDMI sources.

2.4. RF Output

Connect the output of the HKM 40-0x to the existing distribution network. Use shielded coaxial cables with F connectors. You can find suitable cables and connectors in the current AXING catalog or at www.axing.com.

If you are using more than one HKM 40-0x, the outputs must be connected with suitable combiner.

2.5. Equipotential bonding

The device and the outer conductors of the coaxial cable must be connected to the equipotential bonding. This serves to avoid dangerous overvoltages (caution: fire/life hazard) according to EN 60728-11.

- ➔ Use the equipotential bonding connection at the device.
- ➔ Use, for example, a CFA 7-01 earth connection block at the RF output of the device.

2.6. Power supply



CAUTION

The HKM 40-0x have a built-in power supply (100 ... 240 VAC / 50 ... 60 Hz).

- ➔ Do not connect the device unit until all assembly and installation work has been completed.
- ➔ Use the supplied power cord.
- ➔ Connect the power cord to an appropriate wall outlet.

3. Configuration

The device is configured via the graphical user interface of the integrated web interface.

To access the user interface, you need a standard PC/laptop with a network interface and the actual version of the installed web browser. To connect the network interface of the device to the computer, you need a commercially available network cable.

The HTTP protocol is used for communication allowing a worldwide remote maintenance of the systems at various locations via the Internet. Access protection is implemented by means of the password prompt.

The following values are preset ex factory:

- IP address: 192.168.0.168
- Subnet mask: 255.255.255.0.


The computer and the headend must be in the same subnetwork. The network part of the IP address of the computer must be set to 192.168.0. and the subnet mask must be set to 255.255.255.0.

The host part of the network address is required for the identification of the devices and can be assigned in the subnetwork only once. You can allocate to the computer any not allocated host address between 0 and 255.

Hint:

Change the IP address and the subnet mask of your computer accordingly. (e.g.: IP address:192.168.0.11 and subnet mask: 255.255.255.0)

Control panel > Network connections > LAN connection > Properties > Internet protocol version 4 TCP/IPv4 > Properties > Use the following IP address:

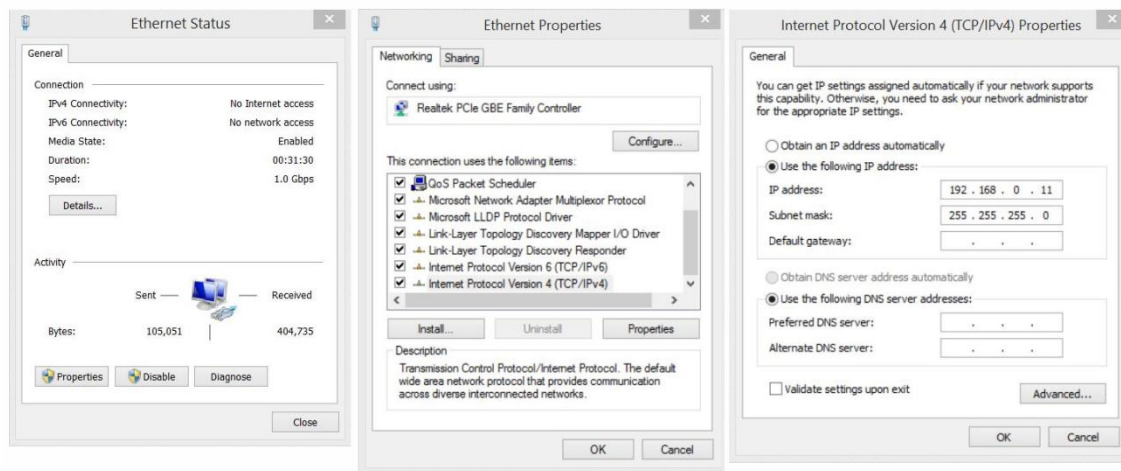

➔ Click OK to save.

3.1. Login

➔ Start your web browser and enter the IP address of the device: 192.168.0.168.

The web-based user interface is protected against unauthorized access. When accessing the user interface, the first thing is the password request.

➔ Enter the default password: *Ramsen8262*.

Changing the password:

- ➔ Please change the password immediately after the first commissioning and choose a sufficiently safe password. Keep this password at a safe place.
- ➔ Menu item: **System** > **Set password** (see 3.6.6 on page 21).

Notes:

- If the browser is closed while you are still logged in, an automatic logout occurs 2.5 minutes later.
- If the browser window stays open, there is no automatic logout. It allows monitoring the installation via the web browser.

3.2. RF settings

- ➔ Click **RF** on the main menu.
Depending on the modulator selected, the **RF PARAMETERS** for DVB-C or DVC-T are displayed (how to select the modulator type is described under 3.6.7 Modulator Type on page 21).

3.2.1. DVB-C


The screenshot shows the 'axing' web interface with a blue header. The header contains the 'axing' logo, a navigation bar with tabs for 'RF', 'VIDEO', 'AUDIO', 'STREAM', and 'SYSTEM', and a 'RF' logo on the right. The 'RF' tab is selected. On the left, a sidebar shows 'RF Parameters' with sub-links 'Setup RF output' and 'Advanced RF setting'. The main content area is titled 'Setup DVB-C RF output' and contains the following fields:

- Country : Europe (dropdown)
- Area : Others (dropdown)
- Frequency : E21(474MHz) (dropdown)
- Output level : 105 dBuV (dropdown)
- Symbol Rate : 6 . 900000 Mbps (text input)
- Constellation : QAM256 (dropdown)
- IQ swap : ☐ enable ☒ disable (radio buttons)

At the bottom of the form are two buttons: 'Save Settings' and 'Cancel Changes'.

- ➔ Make a pre-selection using the **Country** and **Area** menus.
Depending on the selection made, the country-specific channels are displayed in the Frequency field.
- ➔ Select an output level of 85 ... 105 dBμV in the **Output level** selection field.
- ➔ The symbol rate between 1000 and 7500 can be freely set in the **Symbol Rate** field. The default value is 6900. Some networks also work with 6875. If working with only 7MHz bandwidth, a symbol rate of 6111 is in use.
- ➔ In the **Constellation** selection field, select the desired output modulation (QAM 16/32/64/128/256).
QAM256 provides the highest data transfer rate, but also requires the best network quality.
- ➔ The **IQ swap** option enables or disables the inverse phase rotation of the IQ signal by exchanging the I and Q inputs.
- ➔ Click **Save Settings** to save your settings.

3.2.2. DVB-T

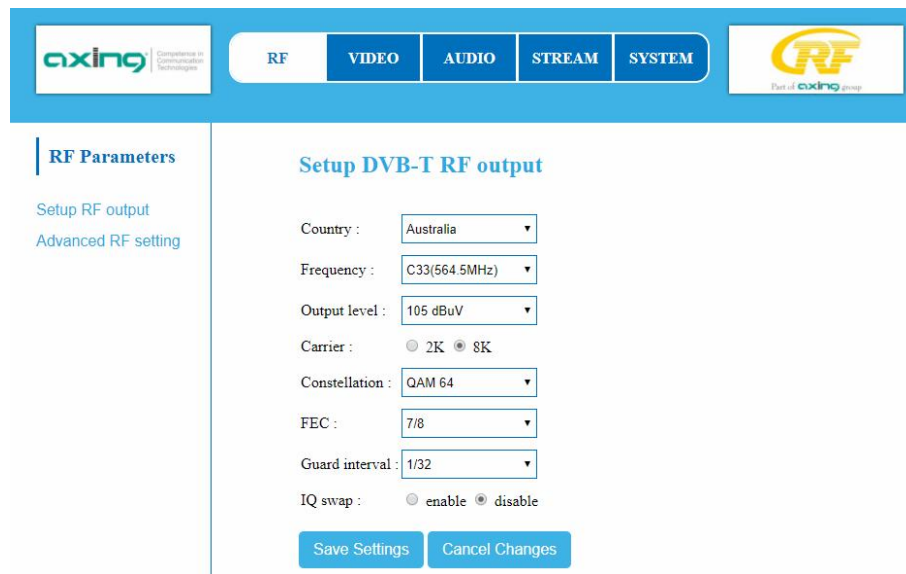

- ➔ Make a pre-selection using the **Country** and **Area** menus.
Depending on the selection made, the country-specific channels are displayed in the Frequency field.
- ➔ If you select **Others** in the **Country** field, you can set the frequencies freely.

Setup DVB-T RF output

Country : 

Frequency : MHz

- ➔ Select an output level of 85 ... 105 dBμV in the **Output level** selection field.
- ➔ In the **Constellation** selection field, select the desired output modulation (QAM 16/64).
QAM64 allows the highest data transfer rate, but also requires the best network quality.
- ➔ In the **FEC** selection field, select the FEC factor (1/2, 2/3, 3/4, 5/6 7/8).
By changing the FEC factor, the proportion of the FEC data is changed in relation to the user data. (FEC 1/2 = low data rate but strong error protection, FEC 7/8 - high data rate but low error protection).
- ➔ In the **Guard Interval** field, select the protection interval from 1/32, 1/16, 1/8, 1/4. This protection interval avoids the symbol overflow during DVB-T transmission. The guard interval expresses the ratio of the transmission pauses to the useful data transmission time. A very long protection interval (eg 1/4) leads to a very low data rate. When transmitting in a faultless coaxial distribution network, a very small protection interval is sufficient (1/32).
- ➔ The **IQ swap** option enables or disables the inverse phase rotation of the IQ signal by exchanging the I and Q inputs.
- ➔ Click **Safe Settings** to save your settings.

3.2.3. Advanced RF settings

- ➔ If necessary, enter the fine adjustment of the output channel in 10 kHz steps in the **Frequency offset** field.
- ➔ The **Output enable** option can be used to switch off the output signal.
- ➔ The **Single Tone** option determines whether, for example, in the event of a faulty or missing input signal, a single carrier is to be output as an output signal.
- ➔ Click **Safe Settings** to save your settings.

3.3. Video Source

- ➔ On the main menu, click **Video**.

The settings for the video source can be made for each of the four input ports.

- ➔ In the **Port** selection field, select video source **1** to **4**.
- ➔ For each video source, set the **Output Coding** (H.264 or MPEG2).
- ➔ For each video source, set the **Encoder Rate** to **Auto** or select a value between **4 ... 14 Mbps**.
If you select **Auto**, make sure that the output data rate is not exceeded.


The **Resolution** and **Current Rate** fields indicate the resolution and bit rate of the connected video source.

- ➔ Click **Safe Settings** to save your settings.

3.4. Audio Source

➔ On the main menu, click **Audio**.

The settings for the audio source can be made for each of the four input ports.

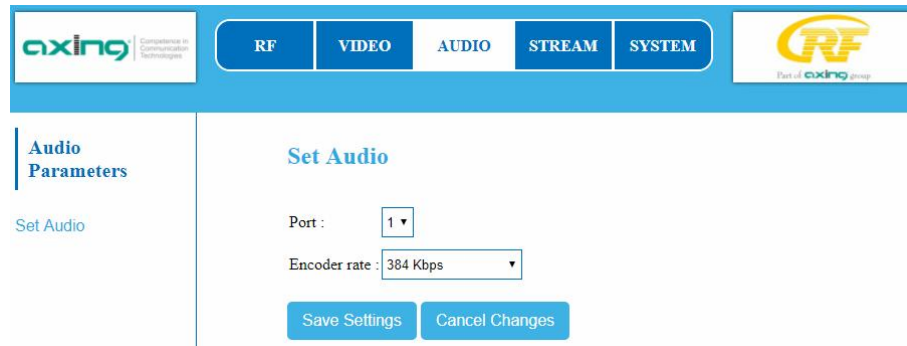

The screenshot shows the 'Set Audio' configuration page. At the top, there is a navigation bar with tabs for RF, VIDEO, AUDIO (selected), STREAM, and SYSTEM. Below the navigation bar, on the left, is a sidebar with 'Audio Parameters' and 'Set Audio' (selected). The main content area is titled 'Set Audio' and contains a 'Port' dropdown menu set to '1' and an 'Encoder rate' dropdown menu set to '384 Kbps'. At the bottom of the main content area are two buttons: 'Save Settings' and 'Cancel Changes'.

➔ In the **Port** selection field, select **1** to **4**.

➔ Set the bit rate to **128**, **256** or **384 Kbps** for each audio source in the **Encoder Rate** field.

➔ Click **Safe Settings** to save your settings.

3.5. Stream

➔ On the main menu, click **Stream**.

Settings can be made for each of the four output streams.

3.5.1. Service Name

The names of the four output streams are defined here. These are displayed as program names in the TV set after the programm scan.



The screenshot shows the 'Set Service Name' configuration page. At the top, there is a navigation bar with tabs for RF, VIDEO, AUDIO, STREAM (selected), and SYSTEM. Below the navigation bar, on the left, is a sidebar with 'Stream Parameters' and a list of options: 'Set Service Name' (selected), 'Set Service ID', 'Set LCN', 'Set PID', 'Set NIT', 'Set PDS', 'Set TS ID', and 'Set Service Type'. The main content area is titled 'Set Service Name' and contains a 'Port' dropdown menu set to '1' and a 'Service name' text input field containing 'Axing-HD1' with a note '(At most 15 characters)'. At the bottom of the main content area are two buttons: 'Save Settings' and 'Cancel Changes'.

➔ In the **Port** selection field, select **1** to **4**.

➔ Enter a maximum 15-character program name in the **Service name** field.

➔ Click **Safe Settings** to save your settings.

3.5.2. Service ID


- ➔ In the **Port** selection field, select **1** to **4**.
- ➔ In the **Service ID** field, type an ID between 1 and 65535.
The service IDs of all streams in your network must be unique.
- ➔ Click **Safe Settings** to save your settings.

3.5.3. LCN

- ➔ In the **Port** selection field, select **1** to **4**.
- ➔ In the LCN field, enter a logical channel number between 1 and 1023.
If the connected TVs support LCN, the respective stream is stored there under the entered program location.
- ➔ Click **Safe Settings** to save your settings.

3.5.4. PID

Packet identifier changes should only be performed by experienced users.

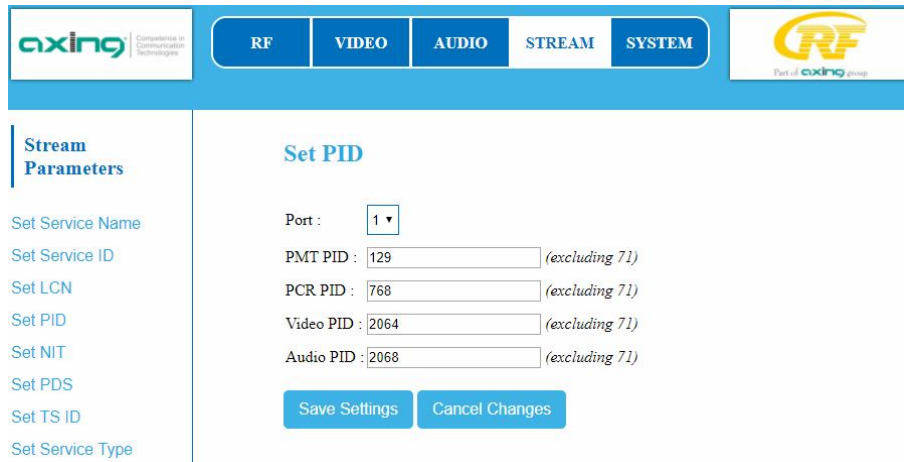


➔ In the **Port** selection field, select **1** to **4**.

Enter the **PMT PID** (Program Map Table), **PCR PID** (Program Clock Reference), **Video PID** and **Audio PID** in the appropriate fields.

➔ Click **Safe Settings** to save your settings.

3.5.5. NIT


The NIT setting must only be changed in large networks. Changes should only be carried out by experienced users.

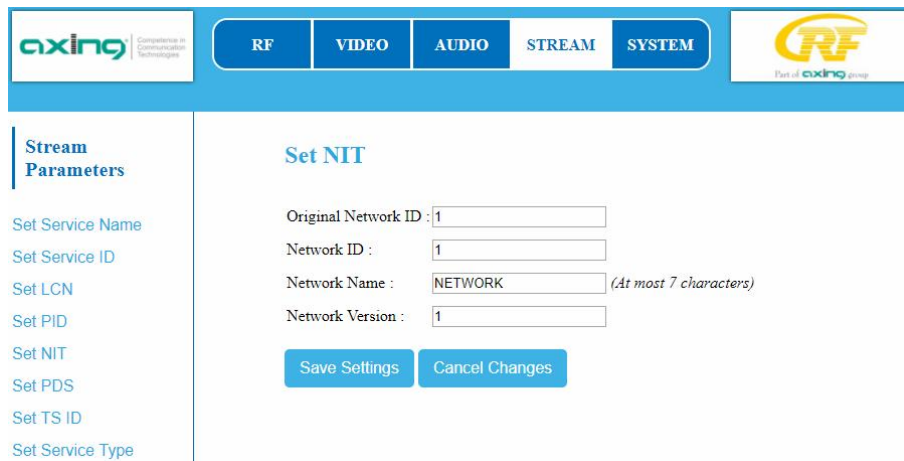

➔ Click **Safe Settings** to save your settings.

3.5.6. PDS

The **PDS** field is used to enter a Private Data Specification. It is a binary 8-bit field, values are allowed from 00000000 to 11111111.

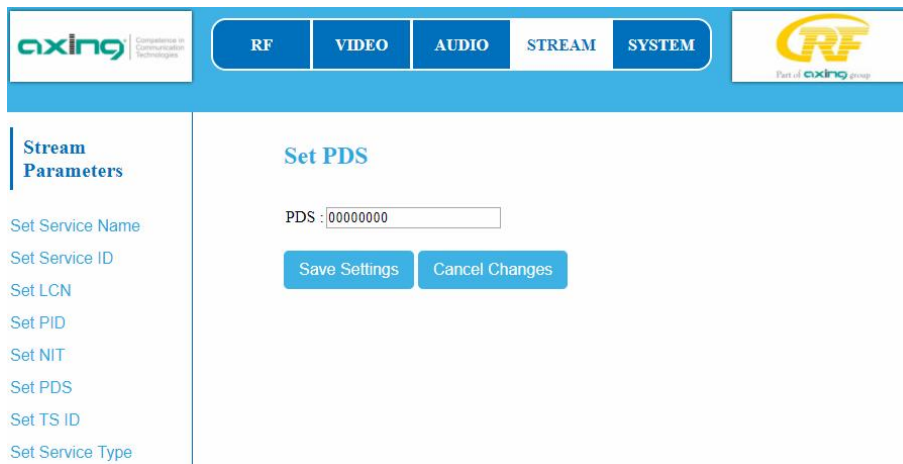

The screenshot shows the 'axing' logo and 'Competence in Communication Technologies' on the left. The top navigation bar includes 'RF', 'VIDEO', 'AUDIO', 'STREAM', and 'SYSTEM'. The 'STREAM' tab is active. On the left sidebar, 'Stream Parameters' is selected, with a list of options: 'Set Service Name', 'Set Service ID', 'Set LCN', 'Set PID', 'Set NIT', 'Set PDS', 'Set TS ID', and 'Set Service Type'. The main area is titled 'Set PDS' and contains a text input field labeled 'PDS : 00000000'. Below the input field are two buttons: 'Save Settings' and 'Cancel Changes'.

3.5.7. Transportstream ID


The **TS ID** (Transportstream ID) must be unique for each transportstream. If further transport streams occur in your DVB-C / T network, you may have to assign a different ID here.



The screenshot shows the same interface as the previous one, but the 'Set TS ID' option is selected in the sidebar. The main area is titled 'Set TS ID' and contains a text input field labeled 'TS ID : 1'. Below the input field are two buttons: 'Save Settings' and 'Cancel Changes'.

➔ Click **Safe Settings** to save your settings.

3.5.8. Service Type HD or SD

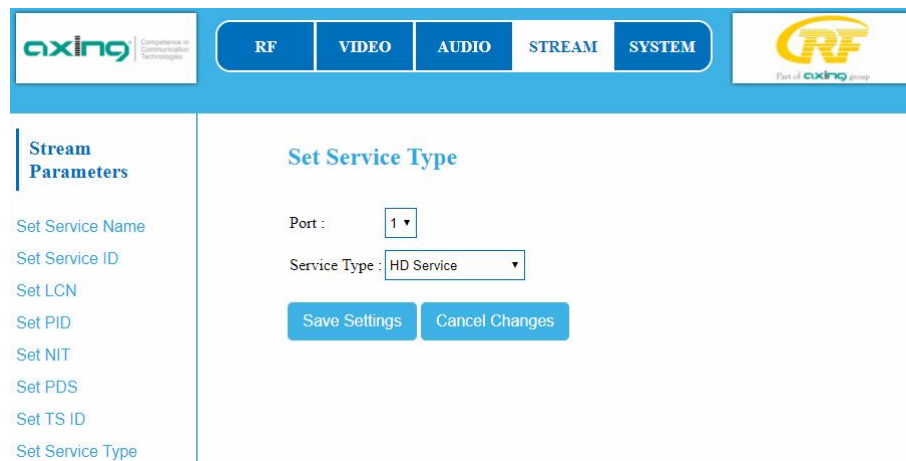


- ➔ In the **Port** selection field, select **1** to **4**.
- ➔ In the **Service Type** selection field, select for each stream whether it is output in **HD** or **SD**.
- ➔ Click **Safe Settings** to save your settings.

3.6. System

- ➔ On the main menu, click **System**.

In the **System** menu item, the system can be reset, a software update is carried out, the IP address changed, a new password assigned.


3.6.1. Reset

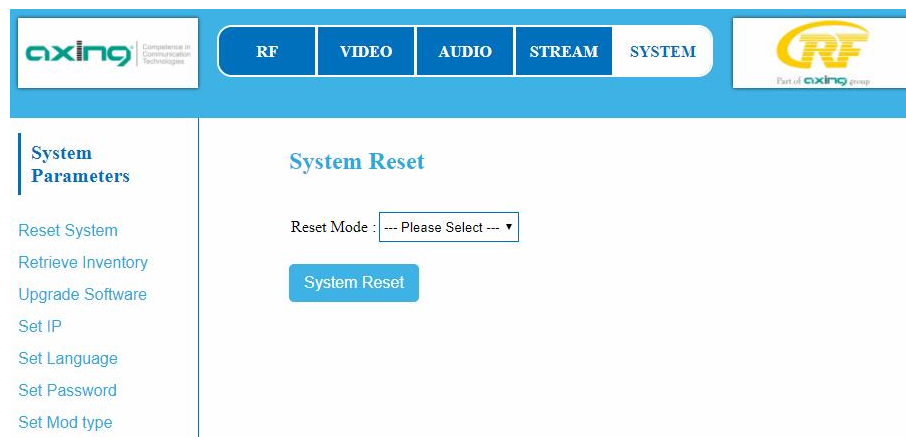

- ➔ In the **Reset Mode** field, select whether you want to perform a hardware reset, a software reset, or whether you want to reset the HKM 40-0x to its factory settings.
- ➔ Click on **System Reset** to perform the reset.


3.6.2. Retrieve Inventory

Under **Retrieve Inventory** you will find the current version of the HKM 40-0x.

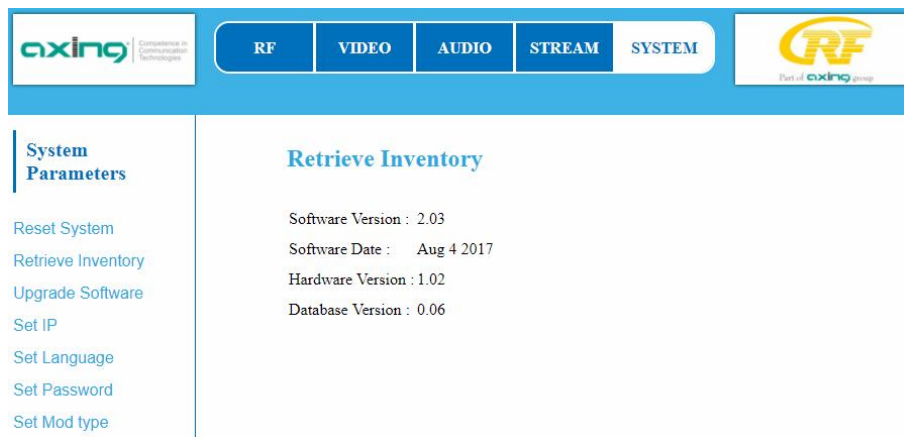


3.6.3. Upgrade Software

The software can be updated under **Upgrade Software**.

- The version of the currently installed software can be found in the menu item "Retrieve Inventory".
- The version of the currently available software can be found on the Internet at <https://axing.com/en/downloads/software-and-firmware/>
 Software for Encoders


A software upgrade will be downloaded directly from the remote server. This requires an existing internet connection of the HKM 40-0x.

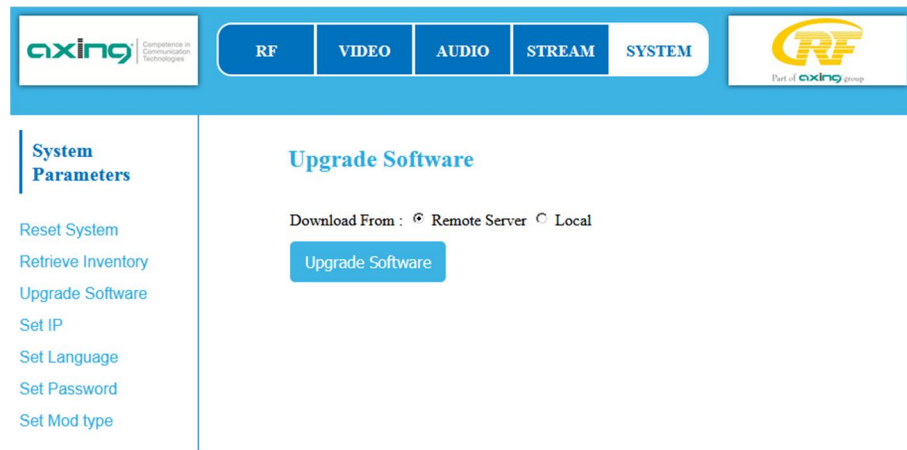

➔ Select Download From **Remote Server**.

➔ Click **Upgrade Software**.

 The HKM 40-0x establishes a connection to the remote server and downloads the software. The download progress is displayed.



After the download the upgrade of the device begins. The remaining time is displayed.

Please wait 51s to Reboot and Config
New Firmware

Do not switch off the device during the upgrade!

3.6.4. IP Address

Dynamic IP address

➔ For **Enable DHCP**, select **enable** to include the device in a network with a DHCP server.

Static IP address

➔ For **Enable DHCP**, select **disable** to link the device to a network with a fixed IP address. The IP address, Net mask and Default Gateway can be changed here.

- ➔ Click **Safe Settings** to save your settings.
- ➔ After the changes have been saved, the HKM 40-0x is restarted automatically.
- ➔ After restarting, you must enter the new IP address in the browser and log in again.

3.6.5. Language


Here you can select the language of the interface.

- ➔ Click **Safe Settings** to save your settings.

3.6.6. Password

The factory-set password is: Ramsen8262.


After the first commissioning of the cassette, the factory-set password should be changed immediately.

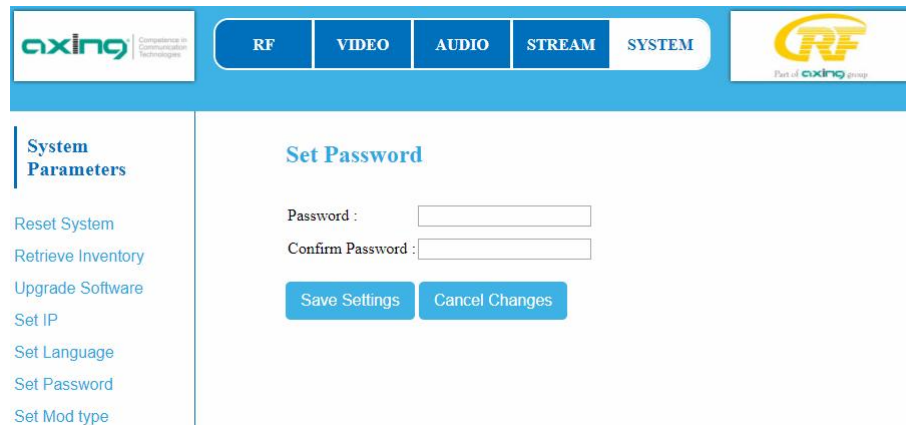

- ➔ Enter a new password with 8 to 10 characters and / or numbers.
- ➔ Re-enter the password.
- ➔ Click **Safe Settings** to save your settings.
- ➔ After the changes have been saved, the start page is displayed, you must log on again.

3.6.7. Modulator Type

Depending on the configured modulation method, the output signals are modulated in DVB-C or DVB-T..

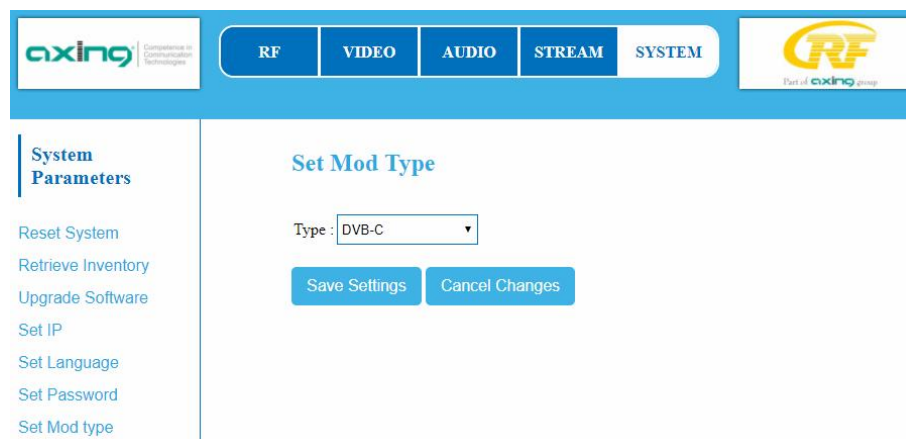

- ➔ Select a modulation method in the **Type** field.
- ➔ Click **Safe Settings** to save your settings.
- ➔ The modulation method is changed. The remaining time is displayed.

**Please wait 51s to Reboot and Config
New Firmware**

3.6.8. SMARTPortal

If you are a registered user of the SMARTPortal, then you can remotely control the device via the SMARTPortal and, if necessary, receive support from AXING.

Prerequisite is an internet connection for the device.


- ➔ At **State**, select **enable**.
- ➔ Activate, if required, at **AXING support** the option **allowed**.
- ➔ In the field **Email address**, enter the e-mail address with which you are registered at SMARTPortal.
- ➔ In the field **Userkey**, enter the user key that you received when registering at SMARTPortal.
- ➔ In the field **Device Name**, enter a name of the device. This name will appear later in the SMARTPortal to help you identify the device.
- ➔ In the field **Location**, enter a name for the location of the device. This name will appear later in the SMARTPortal to help you identify the device.

Click on **Save Settings**. The data is saved and the connection to the SMARTPortal is established.

4. Technical specifications

Bst-Nr.	HKM04000	HKM04002
Number of inputs	4 × HDMI	
Supported HDCP version	HDCP 1.x	
Input video resolution	1080p@50 Hz 1080p@60 Hz	
Max. bit rate per channel	16 Mbit/s	
Audio Encoder	MPEG-1 audio layer II	
Video Encoder	H.264 (MPEG-4)	
Number of output channels	1 × DVB-C/DVB-T	2 × DVB-C/DVB-T
Output frequency range	45.....862 MHz	
Output channels adjustable	E2.....E69	
Output connector	1 × F-female	
Output test port	1 × F (−30 dB)	
Output impedance	75 Ω	
Output level adjustable	90...105 dBμV @ 1 channel	90...105 dBμV @ 1 channel 87...102 dBμV @ 2 channels
Output modulation, modulation type	16QAM, 32QAM, 64QAM, 128QAM, 256-QAM @ DVB-C 16QAM, 64QAM @ DVB-T	
Output video resolution	1080p@25 Hz 1080p@30 Hz	
MER	≥ 40 dB @ DVB-C ≥ 36 dB @ DVB-T	
Output symbol rate	1...7,5 MBauds/s	
FEC	1/2, 2/3, 3/4, 5/6, 7/8 @ DVB-T	
FFT	2k, 8k mode @ DVB-T	
Output guard interval	1/4, 1/8, 1/16, 1/32	
Output bit rate, max	50,87 Mbps @ DVB-C 31,668 Mbps @ DVB-T	
Configuration interface	1 × RJ-45, IEEE 802.3, 100 Base-T	
Operation voltage	100...240 VAC/50...60 Hz	
Power consumption	50 W	
Operating temperature range (acc. to EN 60065)	−10°C...+50°C	
Dimensions (W × H × D) appr.	480 × 253 × 47 mm	

Hersteller | Manufacturer
AXING AG
Gewerbehaus Moskau
 8262 Ramsen

EWR-Kontaktadresse | EEA contact address
Bechler GmbH
Am Rebberg 44
 78239 Rielasingen