

DE

Aktualisierung der USB-Firmware

HINWEIS

Die USB Firmware muss zwei Mal installiert werden!

- 1. Die aktuelle UIM-1-00 Software herunterladen und entpacken.
- Die Datei uim-1-00_usb-firmware_uim0101-20230318-141742.image und die Datei UpdateInfo.txt auf einen USB-Stick kopieren. Beide Dateien müssen sich zusammen im Hauptverzeichnis des USB-Sticks befinden.
- 3. USB-Stick in den USB-Port des UIM 1-00 stecken.

Computence in Communication Technologies	Username Password Log in	admin
UIM 1-00		
Status		
Media Source		

- 4. Über einen aktuellen Webbrowser in den UIM 1-00 mit der Adresse 192.168.0.168 einloggen. Der werkseitige Benutzername und das werkseitige Passwort lauten admin und admin.
- 5. Unter **Update** auf **USB Firmware Upgrade** klicken.

- 1	Update
Communication Technologies	LCD Module
	Modulator Firmware
UIM 1-00	NMS
Status	USB Firmware Upgrade
	Progress
Media Source	
Modulator	
Settings	
Update	
Log out	
192 168 0 168 savs	
152.100.0.100 says	
Click OK to Upgrade Decoder F	Irmware

6. Mit OK bestätigen.

Das Gerät wird aktualisiert, der Vorgang dauert einige Minuten. Während dessen das Gerät nicht von der Stromversorgung trennen.

Cancel

Modulator Firmware	
NMS	
USB Firmware Upgrade	Please wait, It may take 10 minutes

Technische Verbesserungen, Änderungen im Design, Druckfehler und Irrtümer vorbehalten. Technical improvements, changes in design, printing- and other errors reserved.



LCD Module	
Modulator Firmware	
NMS	
USB Firmware Upgrade	Validating Files
Progress	

-Update-

LCD Module	
Modulator Firmware	
NMS	
USB Firmware Upgrade	Upgrading
Progress	
Update	

LCD Module]
Modulator Firmware]
NMS	
USB Firmware Upgrade	Upgrade Completed
Progress	

Nach der Aktualisierung der Firmware, wird das Gerät neu gestartet.

Der Vorgang muss nun wiederholt werden. → Die Schritte 4, 5 und 6 nochmal durchführen.

Aktualisierung der NMS

→ Ins Geräte einloggen und unter Update auf die Schaltfläche NMS klicken.

Competence in	Update
COmmunication Technologies	LCD Module
	Modulator Firmware
UIM 1-00	NMS
Status	USB Firmware Upgrade
Media Source	Progress
Modulator	
Settings	
Update	
Log out	

➔ Die Datei UIM100_AXING_1.16.41_230321.bin auswählen und auf Update klicken. Warten, bis die Aktualisierung abgeschlossen wurde und das Gerät den Neustart durchgeführt hat.

Unter Status werden anschließend folgende Parameter angezeigt:

Version	UIM0010-20230318-141742	
_NMS		
	Version	1.16.41
	IP Address	192.168.0.168

Technische Verbesserungen, Änderungen im Design, Druckfehler und Irrtümer vorbehalten. Technical improvements, changes in design, printing- and other errors reserved.

ΕN

Updating the USB firmware

NOTICE

The USB firmware must be installed twice!

- 1. Download and unpack the latest UIM-1-00 software.
- 2. Copy the USB firmware uim-1-00_usb-firmware_uim0101-20230318-141742.image and the file UpdateInfo.txt to a USB stick. **Both files must be in the root directory of the USB stick**.

Competence in Communication Technologies

OXINC

3. Insert the USB stick into the USB port of the UIM 1-00.

Computence in Computence in Sectorologies	Username Password Log in	admin
UIM 1-00		
Status		
Media Source		

- 4. Log into the UIM 1-00 with the address 192.168.0.168 via a current web browser. The factory user name and password are admin and admin.
- 5. Under Update click on USB Firmware Upgrade.

CONTRACTOR OF CO	Update LCD Module Modulator Firmware NMS USB Firmware Upgrade Progress
Log out	
192.168.0.168 says Click OK to Upgrade Decoder F	irmware

6. Confirm with **OK**.

The device is updated, the process takes a few minutes. **During this time, do not disconnect the device from the power supply.**

LCD Module]
Modulator Firmware]
NMS]
USB Firmware Upgrade	Please wait, It may take 10 minutes
roaress	

2023-04-13	AXING-BA	UIM-1-00	Undate ndf	3	(4)
2023 04 13			_opuate.pui	1 2	(

Technische Verbesserungen, Änderungen im Design, Druckfehler und Irrtümer vorbehalten. Technical improvements, changes in design, printing- and other errors reserved.



-Update-

LCD Module]
Modulator Firmware]
NMS]
USB Firmware Upgrade	Validating Files

Progress

-Update-

LCD Module	
Modulator Firmware	
NMS	
USB Firmware Upgrade	Upgrading
Progress	

-Update-

LCD Module]
Modulator Firmware]
NMS]
USB Firmware Upgrade	Upgrade Completed
Progress	

After updating the firmware, the unit is restarted. The procedure must now be repeated. → Repeat steps 4, 5 and 6.

Updating the NMS

 \rightarrow Log into the device and click on the "NMS" button under "Update".

Competence in Communication Technologies	Update LCD Module	
UTM 1-00	Modulator Firmware	
Status	Dob Filmwale Opgrade	
Media Source	Progress	
Modulator		
Settings		
Update		
Log out		

→ Select the file UIM100_AXING_1.16.41_230321.bin and click on **Update**. Wait until the update has been completed and the unit has restarted.

The following parameters are then displayed under Status:

Version	UIM0010-20230318-141742	
-NMS-		
	Version	1.16.41
	IP Address	192.168.0.168