⚠ WARNUNG

Sicherheitshinweise:

- Die Installation des Gerätes und Reparaturen am Gerät sind ausschließlich vom Fachmann unter Beachtung der geltenden VDE-Richtlinien durchzuführen. Bei nicht fachgerechter Installation und Inbetriebnahme wird keine Haftung übernommen.
- Vor Öffnen des Gerätes Netzstecker ziehen bzw. Stromzuführung entfernen, andernfalls besteht Lebensgefahr. Dies gilt auch, wenn Sie das Gerät reinigen oder an den Anschlüssen arbeiten.
- Verwenden Sie nur das am Gerät angeschlossene Netzkabel. Es dürfen am Netzkabel auf keinen Fall Teile ausgetauscht oder Veränderungen vorgenommen werden. Es besteht sonst Lebensgefahr, für die keine Haftung übernommen wird.
- Sofern eine austauschbare Sicherung vorhanden ist, ist vor dem Wechsel der Sicherung der Netzstecker zu ziehen. Defekte Sicherungen nur durch normgerechte Sicherungen des gleichen Nennwertes ersetzen.
- Das Gerät darf nur in trockenen Räumen betrieben werden. In feuchten Räumen oder im Freien besteht die Gefahr von Kurzschlüssen (Achtung: Brandgefahr) oder elektrischem Schlägen (Achtung: Lebensgefahr).
- Planen Sie den Montage- bzw. Aufstellort so, dass Sie in Gefahrensituationen den Netzstecker leicht erreichen und aus der Steckdose ziehen können. Wählen Sie den Montage- bzw. Aufstellort so, dass Kinder nicht unbeaufsichtigt am Gerät und dessen Anschlüssen spielen können. Der Montage- bzw. Aufstellort muss eine sichere Verlegung aller angeschlossenen Kabel ermöglichen. Stromversorgungskabel sowie Zuführungskabel dürfen nicht durch irgendwelche Gegenstände beschädigt oder gequetscht werden.
- Wählen Sie einen Montage- bzw. Aufstellungsort, der der Schutzklasse IP 20 entspricht.
- Setzen Sie das Gerät niemals direkter Sonneneinstrahlung aus und vermeiden Sie die direkte Nähe von Wärmequellen (z. B. Heizkörper, andere Elektrogeräte, Kamin etc.) Bei Geräten, die Kühlkörper oder Lüftungsschlitze haben, muss daher unbedingt darauf geachtet werden, dass diese keinesfalls abgedeckt oder verbaut werden. Sorgen Sie außerdem für eine großzügig bemessene Luftzirkulation um das Gerät. Damit verhindern Sie mögliche Schäden am Gerät sowie Brandgefahr durch Überhitzung. Achten Sie unbedingt darauf, dass Kabel nicht in die Nähe von Wärmequellen (z.B. Heizkörper, andere Elektrogeräte, Kamin etc.) kommen.

Technische Daten

Frequenzbereich FM	87,5…108 MHz
Frequenzbereich VHF	174…230 MHz
Frequenzbereich UHF	470…862 MHz
Verstärkung	24 dB
Dämpfung, einstellbar	20 dB
Max. Ausgangspegel[1]	95 dBµV
Anschlüsse	F-Buchse
Integriertes Netzteil	230 V~ / 50 Hz
Leistungsaufnahme	3 W
Maße (B × H × T) ca.	160 × 100 × 45 mm
Schutzklasse	IP 20

1 3rd order max. EN50083-3 60dB KMA

Ihr Gerät ist mit dem WEEE-Symbol markiert (Waste Electronics and Electrical Equipment). Dies bedeutet, dass elektrische und elektronische Komponenten nicht mit dem Restmüll entsorgt werden dürfen. Gebrauchte elektrische und elektronische Komponenten sind separat zu entsorgen.

WEEE Nr.
DE14023300

axing® Competence in Communication Technologies

TVS 6-00

basic-line

DVB-T/T2-Verstärker

Betriebsanleitung

Stand 2017-04-12
Konstruktions- und Typenänderung vorbehalten - keine Haftung für Druckfehler.

Hersteller
AXING AG
Gewerbehaus Moskau
8262 Ramsen

EWR-Kontaktadresse
Bechler GmbH
Am Rebberg 44
78239 Rielasingen

Verwendungsbereich:

Die Geräte sind ausschließlich für den Einsatz zum Verstärken sowie Verteilen von Radio- und Fernsehsignalen im Haus geeignet! Wird das Gerät für andere Einsätze verwendet, wird keine Garantie übernommen!

Die Abbildung zeigt Anwendungsbeispiele für die Verteilung in Sternstruktur (1) und Baumstruktur (2).

Potentialausgleich und Montage:

Zur Vermeidung gefährlicher Überspannungen (Achtung: Brand-/Lebensgefahr), müssen die Geräte gemäß EN 60728-11 am Potentialausgleich angeschlossen werden.

- Verwenden Sie den am Gerät angebrachten Potenzialausgleichsanschluss (3).
- Um den Außenleiter der Koaxialkabel am Potentialausgleich anzuschließen, verwenden Sie z. B. Erdungsblöcke CFA 7-01 am Eingang und Ausgang des Verstärkers (4).
- Verwenden Sie die dem Gerät beiliegenden Montageschrauben und die Montagelöcher an den Geräten (5).

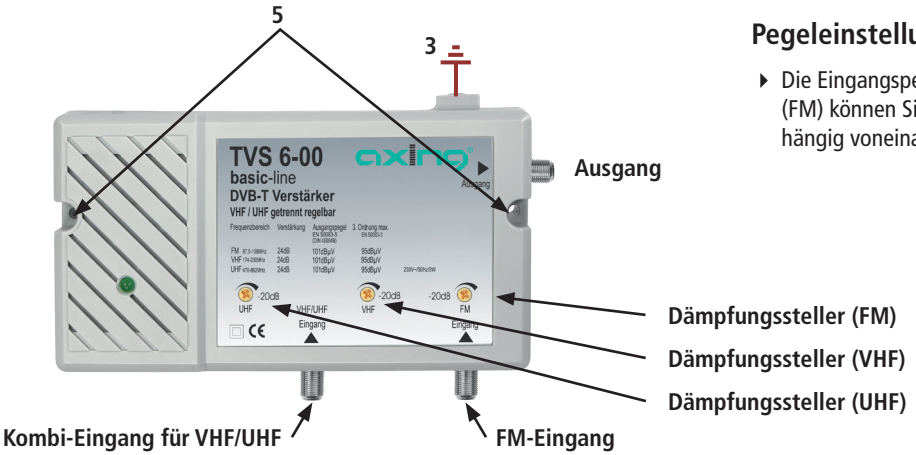

Pegeleinstellungen:

- Die Eingangspegel für UHF, VHF und UKW (FM) können Sie an den drei Reglern unabhängig voneinander einstellen.

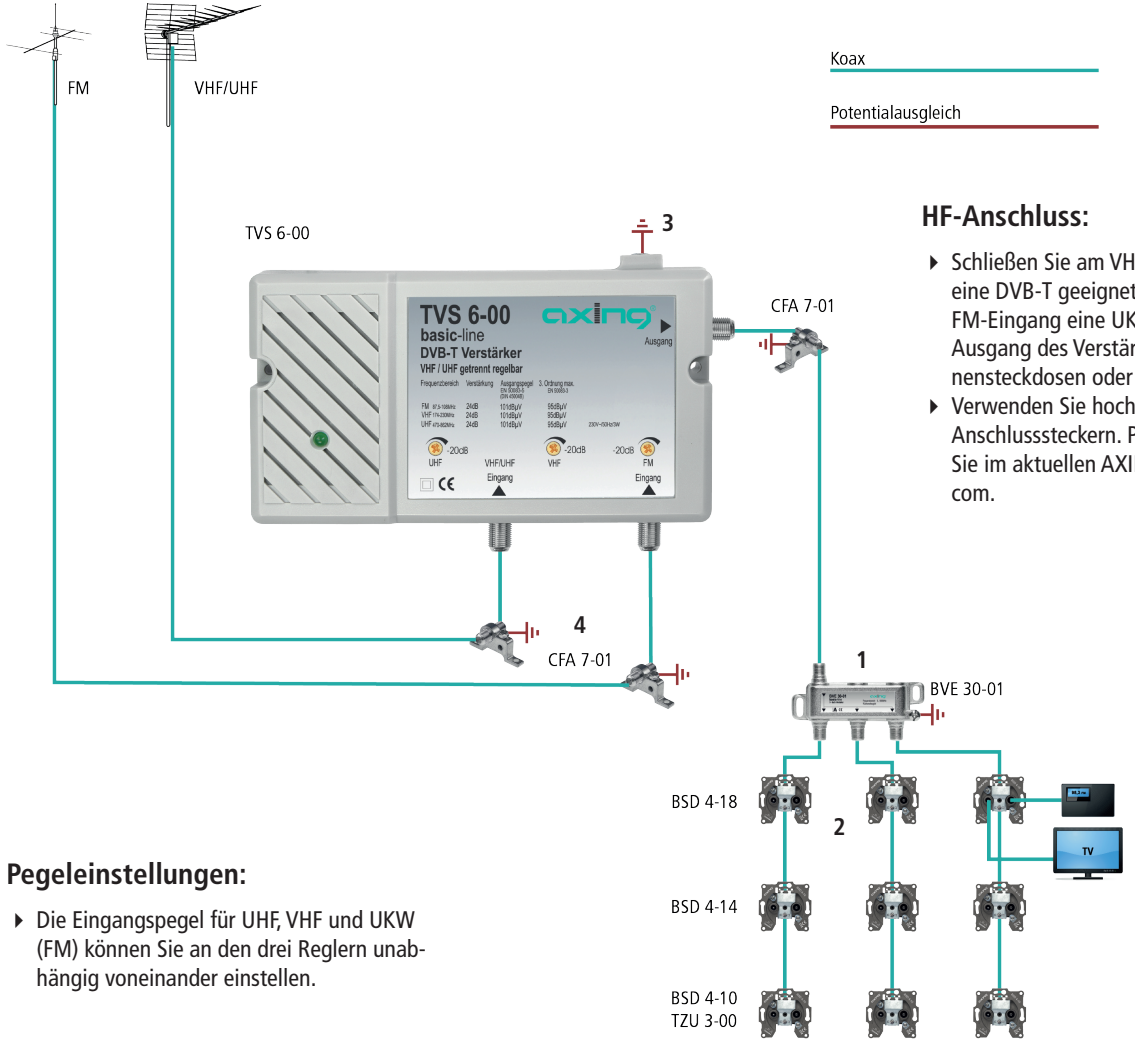

HF-Anschluss:

- Schließen Sie am VHF/UHF-Eingang des Verstärkers eine DVB-T geeignete Antenne an, schließen Sie am FM-Eingang eine UKW-Antenne an. Verbinden Sie den Ausgang des Verstärkers mit den verwendeten Antennensteckdosen oder Abzweigern.
- Verwenden Sie hochgeschirmte Koaxialkabel mit F-Anschlusssteckern. Passende Kabel und Stecker finden Sie im aktuellen AXING-Katalog oder unter www.axing.com.

⚠ WARNING

Safety advices:

- Installation and repairs to the equipment may only be carried out by technicians observing the current VDE guidelines. No liability will be assumed in the case of faulty installation and commissioning.
- Before opening the equipment pull out the power plug or remove the power supply, otherwise there is danger of electrocution. This is also valid for cleaning the equipment or working on the connections.
- Only use the mains cable connected to the device. Never replace any parts or make any modifications on the mains cable. Otherwise there is a risk of mortal injury for which we cannot be held liable.
- Providing that a serviceable fuse exists, the power cord must be pulled out before changing the fuse. Defective fuses may only be replaced with standard compliant fuses that have the same nominal value.
- The equipment may only be operated in dry rooms. In humid rooms or outdoors there is danger of short-circuit (caution: risk of fire) or electrocution.
- Choose the location of installation or mounting so that the power plug can be reached and pulled out of the socket easily in case of danger. Choose the location of installation or mounting such that children may not play unsupervised near the equipment and its connections. The location of installation or mounting must allow a safe installation of all cables connected. Power feeding cables as well as feeder lines may not be damaged or clamped by objects of any kind. To prevent damage to your equipment and to avoid possible peripheral damages, the devices foreseen for wall mounting may only be installed on a flat surface.
- Choose a location of installation or mounting which complies to the protection class IP 20.
- Avoid exposure of the equipment to direct sunlight and to other heat sources (e. g. radiators. other electrical devices, chimney, etc.). Devices that are equipped with heat sinks or ventilation slots must under no circum-stances be covered or blocked. Also ensure for a generous air circulation around the equipment. In this way you avoid possible damage to the equipment as well as a risk of fire caused by overheating. Absolutely avoid that cables come near any source of heat (e.g. radioators, other electrical devices, chimney, etc.).

Technical data:

Frequency range FM	87,5…108 MHz
Frequency range VHF	174…230 MHz
Frequency range UHF	470…862 MHz
Gain	24 dB
Attenuator adjustment range	20 dB
Max. output level[1]	95 dBµV
Connectors	F-female
Built-in power supply	230 V~ / 50 Hz
Power consumption	3 W
Dimensions (W × H × D) appr.	160 × 100 × 45 mm
Protection class	IP 20

1 3rd order max. EN50083-3 60dB KMA

Your device is marked with the WEEE symbol (Waste Electronics and Electrical Equipment). This means that the electrical and electronic components must not be disposed of as residual waste. Used electrical and electronic components must be disposed of separately.

WEEE Nr.
DE14023300

axing® Competence in Communication Technologies

TVS 6-00
basic-line
DVB-T/T2 amplifier
Operation Instructions

State of the art 2017-04-12
Technical changes, design modifications, errors and misprints are subject to change without prior notice.

Manufacturer
AXING AG
Gewerbehaus Moskau
8262 Ramsen

EWR contact adress
Bechler GmbH
Am Rebberg 44
78239 Rielasingen

Field of application:

The devices are suited only for distributing radio and television signals in the house! If the device is used for other purposes, no warranty is given!

The illustration shows an application example of the distribution in star (1) and tree structure (2).

Equipotential bonding and Mounting:

To avoid dangerous overvoltages (attention: risk of fire/death), the devices must be connected to the equipotential bonding according to EN 60728-11.

- Use the equipotential bonding connection attached to the device (3).
- To connect the outer conductor of the coaxial cable to the equipotential bonding, use e.g. earth connection blocks CFA 7-01 at the input and output of the amplifier (4).
- Use the mounting screws included in the delivery and the mounting holes of the devices (5).

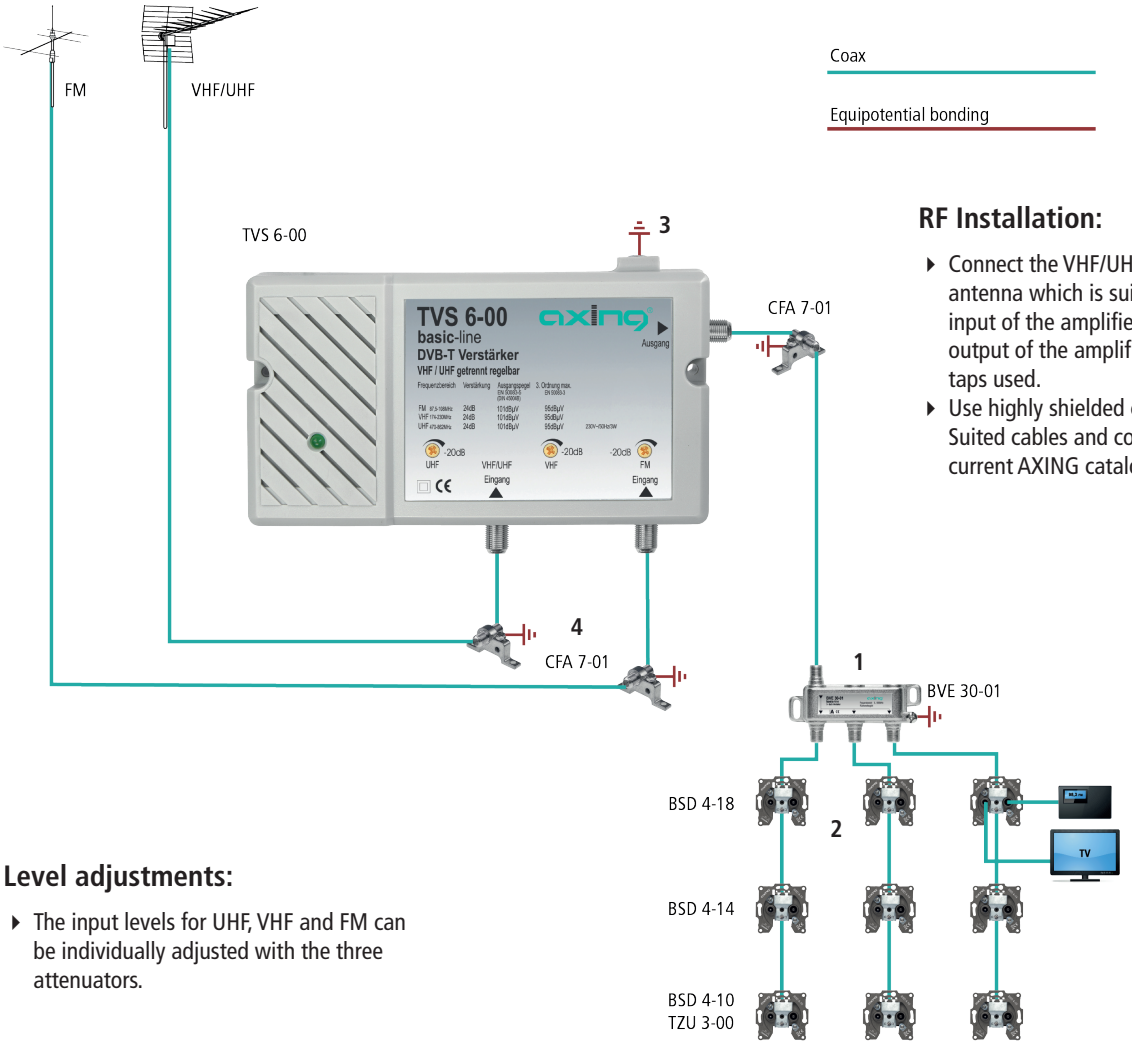

RF Installation:

- Connect the VHF/UHF input of the amplifier to an antenna which is suitabel for DVB-T. Connect the FM input of the amplifier to a FM antenna. Connect the output of the amplifier to the antenna sockets or the taps used.
- Use highly shielded coaxial cables with F connectors. Suited cables and connectors can be found in the current AXING catalogue or at www.axing.com.

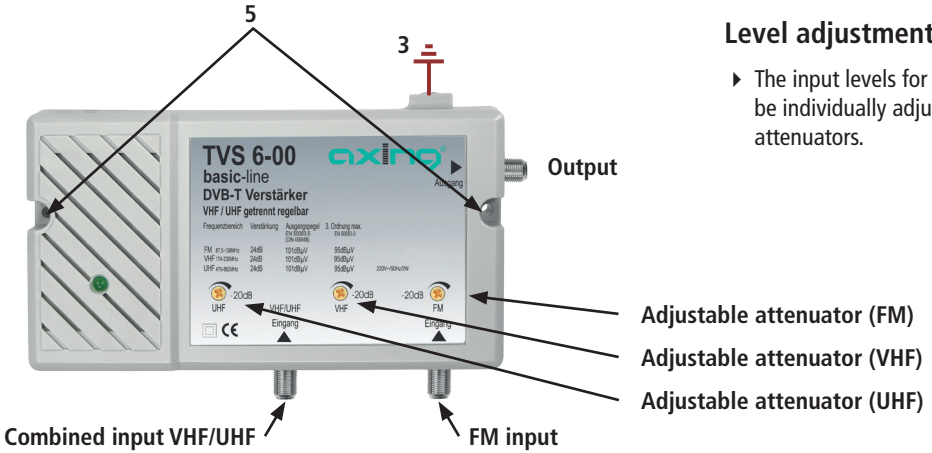

Level adjustments:

- The input levels for UHF, VHF and FM can be individually adjusted with the three attenuators.